

<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	18661P1	Handle, Top
2	18671P1	Guard, Carburetor
3	18662P1	Handle, Bottom
4	18677P1	Washer
5	180126	3/8-16 x 1-1/2 H.H. Bolt Plated
6	18668P1	Bearing, Ball 3/8"
7	180077	5/16-18 x 3/4 Hex Hd. Bolt
8	18674P1	Blade
9	190254	10 - 24 Nut Washer Insert
10	18664P1	Control Assembly
11	156987	10 - 24 x 1-1/4 Machine Screw
12	18663P1	Clip Control
13	180083	5/16-18 Hex Hd. Bolt x 1-1/2 Lg.
14	18675P1	Washer
15	120393	11/32 x 11/16 x .065 Washer
16	9419455	5/16-18 Wash Ins. L. Nut
17	18667P1	Axle, Rear
18	18666P1	Edger-Guard
19	18670P1	Main Frame
20	18676P1	Washer
21	180134	3/8-16 Hex Hd. Bolt 2-1/2 Lg.
22	456004	3/8-16 Washer Insert Lock Nut
23	18665P1	Wheel
24	18652P1	Spacer
25	18678P1	Key, Woodruff
26	18672P1	Blade, Driver (Use on B & S Engine)
27	18673P1	Plate, Driver
NS	18679P1	3.5 H.P. Briggs & Stratton Engine Md1. 92909