## **GRAVELY**

CLARKE-GRAVELY CORPORATION
A Studebaker-Worthington Company


# VELY PERATOR'S PREPORATION Ington Company MANUAL

NAME:

**30" ROTARY MOWER** 

PART NUMBER(S):

Deck Assembly - 20468 30" Mower Drive - 10230

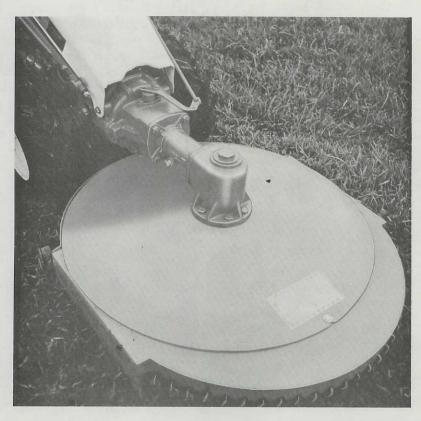

#### 30" ROTARY MOWER WITH 7.6 CUSTOM CONVERTIBLE TRACTOR

#### **GENERAL**

- 1. The 30" Rotary Mower is designed and built to give many years of excellent service. The mower is recommended for rough mowing conditions; has all gear drive, heavy steel deck, rugged skids, and a heavy duty, adjustable blade. The mower attaches to all 7.6 convertible and C10A & C12 tractors.
- 2. The Owners Manual includes the parts list, setting up the mower, safety, operation, and maintenance instructions. Use the parts list for reference to individual part numbers. Contact the Gravely Dealer for further information.

To continue its program of quality and design improvement, the manufacturer reserves the right to change specifications, designs and prices without notice and incurring obligation.

3. CUTTING WIDTH: 30"

LENGTH: 36 1/2" HEIGHT: 14 1/2"

WIDTH: 32"

WEIGHT: 120 lbs.

DRIVE: Right angle bevel gear in cast iron

housing, tapered roller bearings.

DECK: Heavy duty 3/16" welded steel.

BLADE: Steel, 30" length, 3/8" thick, hi-

strength, hi-lift.

FEATURES: All gear drive, adjustable swivel

action, chain guard.

USAGE: Heavy mowing conditions.

APPLICATION: All 7.6 convertible tractors,

C10A & C12 tractors.

Form No. 20758 (3-74)

Printed in U.S.A.

#### **OPERATION**

- 1. Refer to the tractor Owners Manual for safety and operating instructions to engage and disengage P.T.O. (Power Take-Off).
- 2. After the P.T.O. is engaged run the engine at full speed. In thick, lush growth reduce ground speed (not engine speed) to allow the mower enough time to cut and discharge.

#### **ROUTINE MAINTENANCE**

- 1. Check rotor shaft nut to insure tightness.
- 2. Check P.T.O. attaching bolts and nuts to insure tightness.
- 3. Check drive assembly to deck nuts and bolts to insure tightness.
- 4. Perform the lubrication as described in LUBRICATION, paragraphs 1 and 2.
- 5. Keep mower blade sharp and balanced.
- 6. Clear the mower of cuttings and debris.

#### **REMOVAL FROM TRACTOR**

1. Reverse procedure of INSTALLATION, paragraph 1.

#### **ADJUSTMENTS**

1. Swivel action of the mower is regulated by the nut and bolt on the swivel casting, fig 2. Loosening allows more swivel action; tightening reduces the action. The swivel action should allow the mower to follow ground contour.

- 2. The cutting height of the mower is adjusted by the loose collars, See paragraph 3 of ASSEMBLY.
- 3. Safety clutch action is regulated by the tachment clutch assembly, fig 1, Item
  Loosen all 6 locknuts, Item 8. Tighten the 6 bolts all the way into the threaded back plate, Items 1 & 7. Back off each bolt 1/2 turn.
  Lock the bolts in position with the nuts.

#### STORAGE

- 1. Clean mower of all cuttings and dirt.
- 2. Perform all lubrication maintenance.
- 3. Apply a light coat of oil to preserve the finish and appearance.

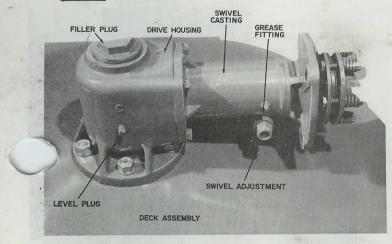


fig 3
MOWER ATTACHED TO TRACTOR

#### **ASSEMBLY**

- 1. Set the drive on the deck. Bolt it in place with the 6 bolts, flatwashers, lockwashers, and nuts. fig 1, Items 49, 50, 51, & 55. Insert the bolts from under the deck.
- 2. Remove nut, flatwashers, nut washers, and loose collars from the rotor shaft and install the blade as in fig 1.
- 3. Cutting height is determined by the placement of the loose collars above and below the blade, fig 1, Item 51. For an average cutting height, use 3 loose collars above and 3 loose collars below the blade. The 2 nut washers are always placed next to the flatwasher and nut as in fig 1. Tighten the rotor shaft nut to 100 ft. lbs. fig 1, Item 58. Equivilent tightness can be obtained with a 15367E1 Wrench or a 16" flex handle and socket.

FRONT



### fig 2 DRIVE MOUNTED ON DECK

#### LUBRICATION


- 1. Remove the filler plug and level plug in fig 2. Fill the drive housing to the oil level plug with SAE 90 gear lubricant. Replace the plugs. Check the level periodically especially if signs of leakage are present.
- 2. Grease the swivel casting through the grease fitting on the casting with general purpose grease. Add grease until it comes out under the swivel adjustment. Regrease once a season; fig 2.

#### INSTALLATION

1. The mower attaches to the tractor with 2 bolts and 2 nuts as shown in fig 3. Do not damage the threaded studs.

#### SAFETY

- 1. <u>REFER</u> to the tractor Owners Manual to familiarize yourself with all controls before operation.
- 2. DO NOT ALLOW PASSENGERS to accompany operator at any time.
- 3. <u>DO NOT ALLOW CHILDREN</u> to operate equipment, nor allow adults to operate it without proper instructions.
- 4. INSPECT WORK AREA for rocks, glass, metal, bones, and any other foreign objects. Stay alert for holes and other hidden hazards.
- 5. <u>USE EXTREME CAUTION</u> when operating on slopes.
- 6. REDUCE SPEED on all side slopes and sharp turns.
- 7. DO NOT OPERATE equipment except from proper operator's position.
- 8. <u>KEEP SAFETY</u> devices and shields in place at all times.
- 9. <u>DISENGAGE POWER</u> to attachment and stop engine prior to making any adjustment or clearing the unit.
- 10. DO NOT WEAR LOOSE fitting clothing.
- 11. <u>KEEP HANDS</u>, feet, hair, clothing, etc., away from moving parts.
- 12. KEEP BYSTANDERS and pets removed from the work area.
- 13. EXERCISE CAUTION to avoid slipping or falling, especially when operating in reverse.
- 14. <u>DIRECT DISCHARGE</u> so as not to endanger life or property; such as people, pets, structures, cars, etc.

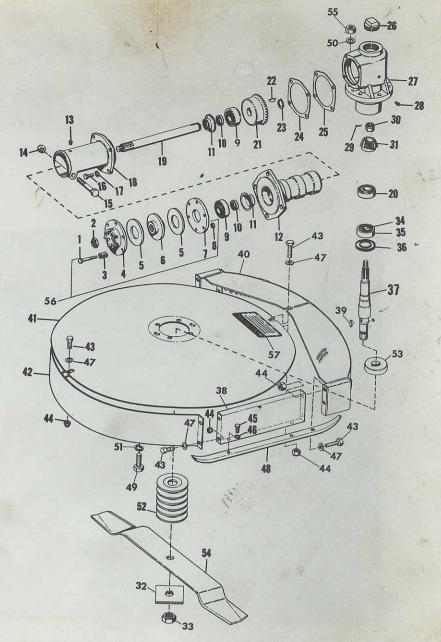

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1TEM NO.  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28	PART NO.  181618 13412P1 12871P1 12867P1 12869P1 12869P1 12869P1 13143P1 13144P1 131250P1 11815P1 94110100 435507 180191 180122 138542 12023P1 12566P1 13145P1 13146P1 12862P1 120502 13187P1 12490P1 12491P1 10499P1 12853P1 1003877	5/16-24 x 1-3/4 Hex Head Bolt 5/8-18 Locknut Esna Spring Dog Plate Friction Washer Drive Plate Back Plate 5/16-24 Thin Light Esna Bearing Race Bearing Cone Oil Seal Oil Seal Retainer Shaft Housing Lincoln #5000 or Equiv. Grease Fitting 1/2-13 Washer Insert Locknut Bolt 1/2-13 x 3-1/4 Hex Head 3/8-16 x 1 Hex Head Bolt 3/8 Internal Tooth Lockwasher Swivel Casting Drive Shaft Race, Roller Bearing Cone, Roller Bearing Bevel Gear #11 Woodruff Key Retaining Ring Gear House Shim .005 Gasket Pipe Plug Gear Housing	34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 53 54 55 55 56 57 NS NS NS NS NS NS NS NS NS NS NS NS NS	PART NO.  13142P1 13139P1 13171P1 19844P1 12855P1 124549 10260A1 10110A3 10109A1 181596 190139 181593 138538 120386 12866P1 180177 120390 120384 12858P1 12861P1 13209P1 120378 10102A1 18549P1 13646P1 12852P1 14101P1 13584P1	Cone, Roller Bearing Race, Roller Bearing Oil Seal (Dual Lip) Rotor Shaft Skid Panel Key Woodruff #9 Chain Guard Deck Weldment Rear Fender Weldment 5/16-24 x 7/8 Hex Head Bolt 5/16-24 kex Washer Insert Locknut 5/16-24 x 5/8 Hex Head Bolt 5/16 Internal Tooth Lockwasher 5/16 x 47/64 x .065 Flatwasher Chain Guard Skid 1/2-13 x 1-1/2 Hex Head Bolt 9/16 x 1-3/8 x .109 Flatwasher 1/2 Spring Lockwasher Loose Collar 1/4" Collar, Fixed Rotary Mower Blade, Heavy Duty 1/2-13 Light Semi-Finish Hex Nut Attachment Clutch Asser' Decal, Danger Gear Shim .010 Gear Shim .020 3 Link Chain 2 Link Chain
29 30 31	119120 125384 12850P1	1/8 Square Head Pipe Plug (Steel) 3/32 x 1-1/4 Cotter Pin 5/8-18 Hex Thick Slotted Nut Bevel Gear			
32 33	20626P1 451543	Washer, Spindle Nut Nut, 7/8-9 Hvy. Jam Hex	fig 1  ILLUSTRATED PARTS LIST		

ILLUSTRATED PARTS LIST

This Limited Warranty is issued by Clarke-Gravely Corporation, Gravely Division, and consists of the following terms:

ed of

- Only the original purchaser of new Gravely manufactured attachments is covered by this Warranty.
- This Warranty covers repair or replacement of parts manufactured by Gravely which are defective in material or workmanship. Gravely will pay for parts and labor only.
- The Warranty starts the date of purchase and lasts for NINETY (90) DAYS for attachments used in Roofer applications, and TWELVE (12) MONTHS for products used in all other applications.
- 4. Some components of Gravely attachments are not covered by the Gravely Warranty. These components are covered by the original manufacturer's warranty. They are:
  - (a) Tires Goodyear, Goodrich, Armstrong, General and Firestone
- 5. To obtain warranty service on Gravely attachments including components not manufactured by Gravely, use this procedure:
  - (a) Notify the Gravely dealer from whom you purchased the attachment.
  - (b) If you have moved and it is not convenient to notify the selling dealer, notify the nearest Gravely dealer. You should supply this dealer with a copy of the bill of sale as proof of the date of purchase.
  - (c) Make arrangements to have the attachment delivered to the dealer (refer to paragraph 6(a) below).
  - (d) If you have any questions concerning the Gravely Warranty, they should be referred to:

Gravely
Clarke-Gravely Corporation
A Studebaker-Worthington Company
One Gravely Lane
Clemmons, N. C. 27012
Attn: Manager of Customer Services

(e) Warranty service on Gravely attachments must be performed by an authorized Gravely dealer or Gravely factory branch.

- 6. This Warranty does not cover the following:
  - (a) Transportation between owner's home or place of business and the dealership. If the dealer provides the transportation of the attachment, he will charge the owner his usual rate for such service.
  - (b) Normal maintenance services and normal replacement of items such as belts lubricants, mower, plow or cultivator blades.
- 7. GRAVELY MAKES NO OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE PERIOD SET OUT IN PARAGRAPH 3 ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE STATEMENT MAY NOT APPLY TO YOU.
- 8. GRAVELY SHALL HAVE NO RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM
  THE BREACH OF ANY WARRANTY, INCLUDING, BUT NOT LIMITED TO, INCONVENIENCE, RENTAL OR PURCHASE
  OF REPLACEMENT EQUIPMENT, LOSS OF
  PROFITS OR COMMERCIAL LOSS. SOME
  STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL
  OR CONSEQUENTIAL DAMAGES, SO THE
  ABOVE LIMITATION OR EXCLUSION
  MAY NOT APPLY TO YOU.
- This Warranty gives you specific legal rights, and you may have other rights which vary from state to state.
- 10. A Gravely registration card is supplied with each Gravely attachment. Please complete the card and return it to Gravely at the address listed on the card. The registration card will be used by Gravely for:
  - (a) Recording date of purchase.
  - (b) Notification of owners in compliance with the Consumer Product Safety Act, should any notification be necessary. The return of registration card is not required in order to take advantage of this Warranty.
- 11. This Warranty is not subject to change or modification by anyone, including Gravely dealers and no Gravely dealer is authorized to make any representations or promises on Gravely's behalf.

