


# ADJUSTABLE SEAT KIT

A. Assembly:

1. Bolt the seat adjusters to the seat plate. See Figure 1. Use the spacers with the large end toward the seat plate. Use the carriage bolts with the neck in the adjuster rail.
2. Using the number 10 hardware, bolt the seat adjuster handle to the latch.

B. Installation:

1. Remove the nuts from the carriage bolts in the bottom of the seat springs.
2. Lift the seat-spring assembly out of the frame weldment and tilt forward.
3. Turn the seat plate assembly so that the latch is to the left side of the power unit.
4. Using the hardware that was in the seat spring, bolt the seat springs to the seat plate assembly.
5. Slide the new assembly into the holes in the frame weldment and secure with 5/16" washer insert nuts. On the Pro Master-50, space the assembly up with four spacers.

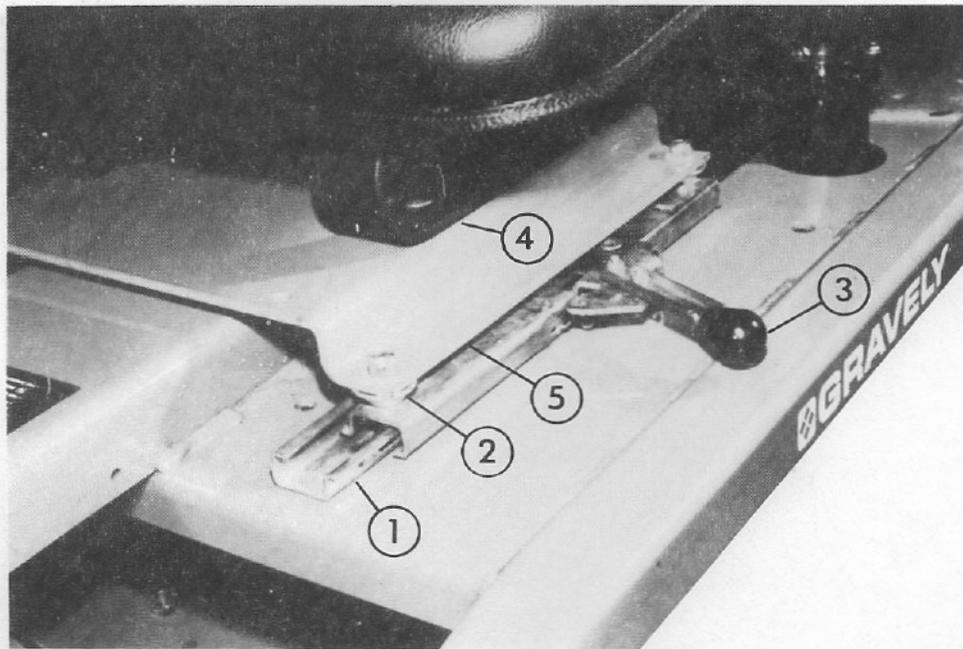

- 1 - Seat Adjuster Assembly
- 2 - Spacer
- 3 - Latch
- 4 - Seat Spring
- 5 - Seat Plate


84003

FIGURE 1

C. Operation:

1. Move the latch to the rear and hold to disengage.
2. Move the seat to the desired position and release the lever.

D. Illustrated Parts and Parts Lists

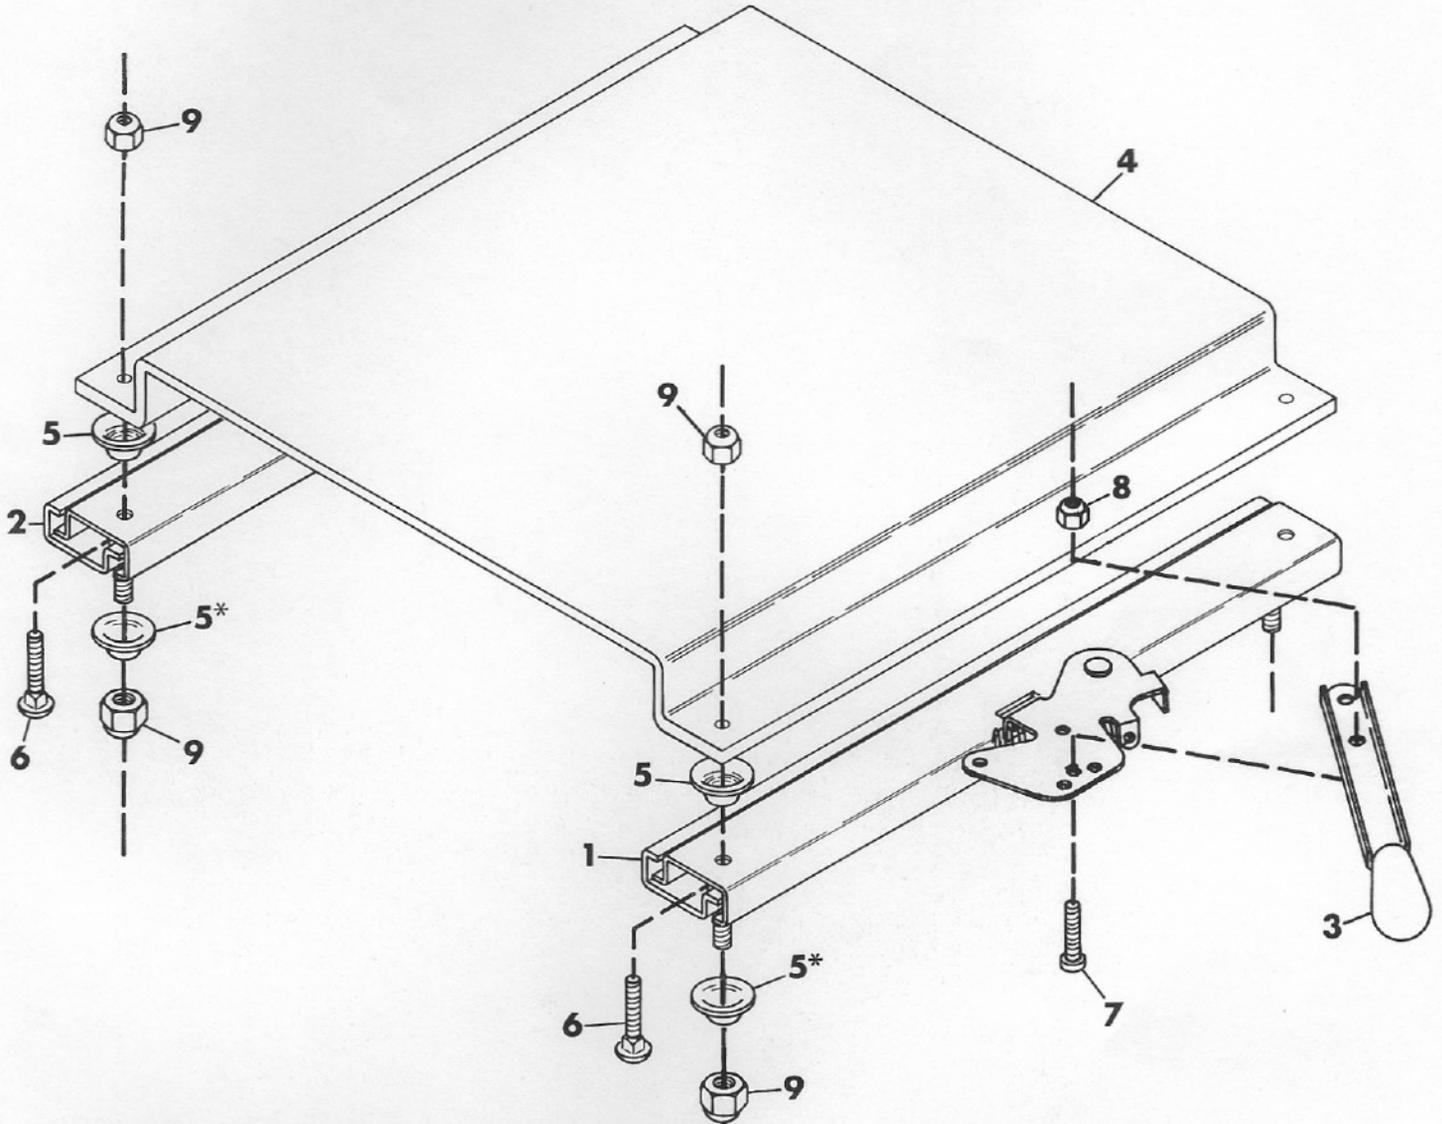

ITEM NO.	PART NO.	QTY.	DESCRIPTION
1	35641	1	Adjuster, Seat w/Latch
2	35642	1	Adjuster, Seat
3	35643	1	Handle, Seat Adjuster
4	42146	1	Plate, Seat
5	35670	4	Spacer
5*	35670	4	Spacer - Lower Spacers Used Only on the Pro Master-50
6	126358	4	Bolt, Carriage 5/16-18x1.00
7	159929	2	Screw, Machine 10-24x.625 P/Hd
8	190254	2	Nut, Lock 10-24
9	419455	8	Nut, Lock 5/16-18