

Requires: 11271E1 Lift Assist Kit

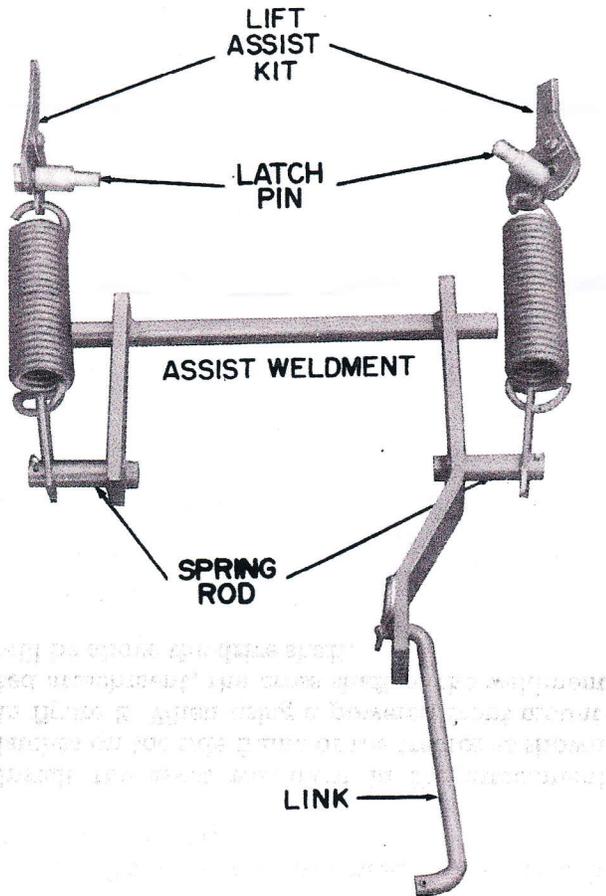


Figure 1

Figure 1 shows the completed assembly of the Lift Assist Auxiliary Kit and the Lift Assist Kit as it would be attached to the tractor.

1. Mount front or rear mounted liftable attachment on tractor.
2. Install the assist weldment in the attachment latches on the side frame of the tractor as shown in figure 2. When using a powered front mounted attachment, the cross shaft of the weldment will be above the drive shaft.

3. Install the link in the first (teardrop shaped) hole of the lift lever weldment and the hole of assist weldment.
4. Install the straps of the Lift Assist Kit on the spring rods of the assist weldment. Secure in place with cotter pins.
5. Install the latch pins in the side frame of the tractor as shown in Figure 2.
6. Install springs in latches and straps and connect to latch pins. Remember the half-moon part of the latch is nearest the tractor.

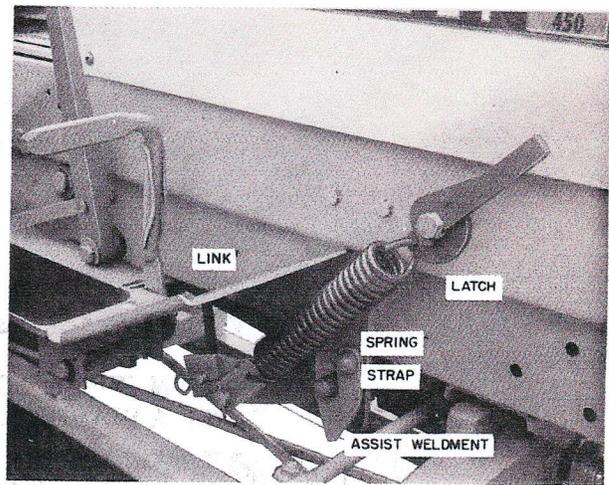


Figure 2

Figure 2 shows the 18899E1 Lift Assist Auxiliary kit and 11271E1 Lift Assist Kit installed on a tractor with a front mounted mower.

NOTE: Mount the attachment on the tractor prior to attaching springs. When removing attachment, be sure to disconnect springs **FIRST!**

CAUTION: Always use care when working with springs. Springs must be under tension to perform satisfactory.

 **GRAVELLY**

1 GRAVELLY LANE
Clemmons, N. C. 27012

Printed in U. S. A.