


# GRAVELLY

## INSTRUCTION MANUAL

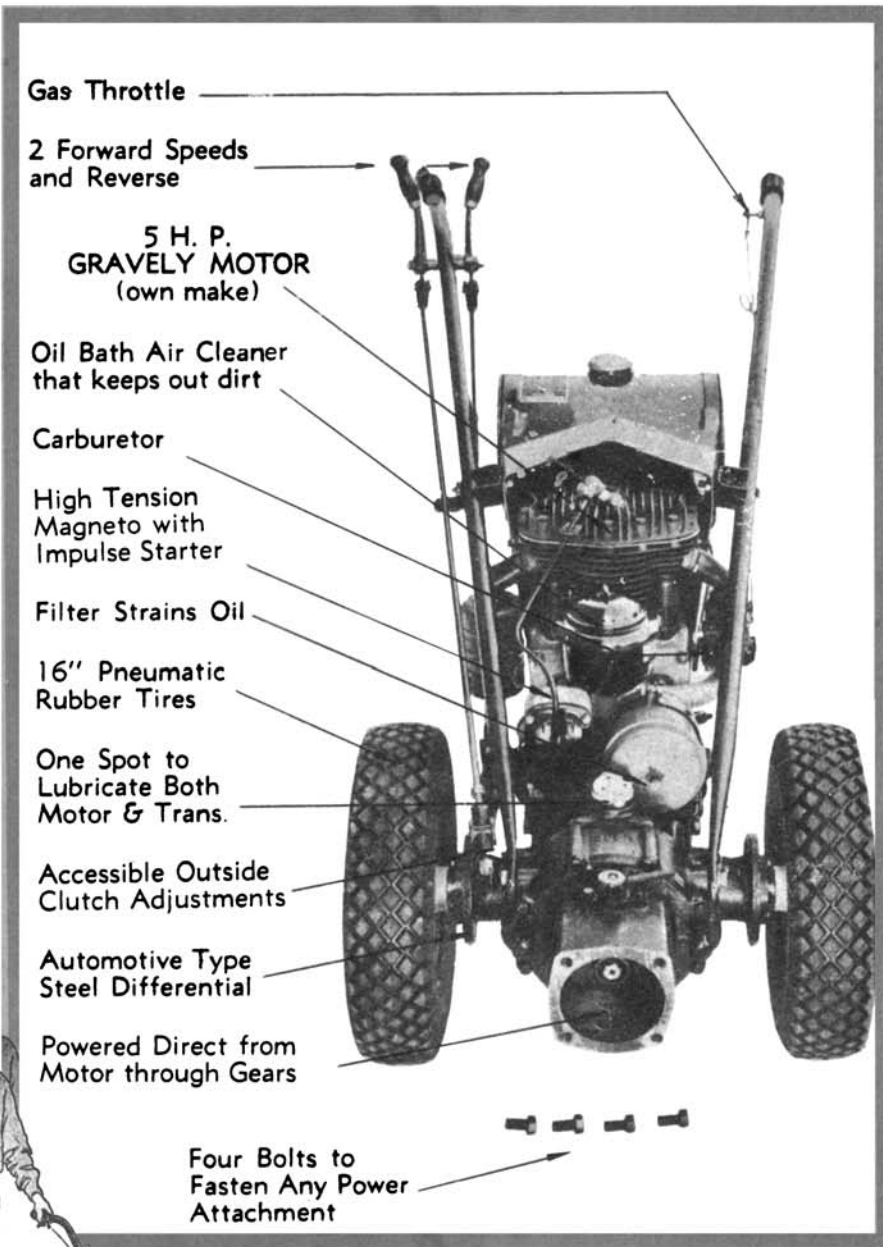

[www.oldgravelys.net](http://www.oldgravelys.net)

### INDEX

Chain Saw	19
Circular Saw	20
Dual Wheels	14
ENGINE	6, 7
Extension Axles	13
Fertilizer Distributor	17
Gang Mower	9
Geared Wheels	16
Governor	26
Hay Rake	14, 26
Leaf Mulcher	21
Oil Pressure Gauge	26
Operating Hints	7
Peg Type Harrow	17
Posthole Digger	24
Power Brush	23
Power Take-Off	24
Rear Hitch	25
Reel Mower	8
Riding Sulky	11, 26
Roller	11, 25
Rotary Knife Mower	21
Rotary Plow	14
Seeder	17
Sickle Grinder	26
Sickle Mower	12
Snowblower	22
Snow Plow, Blade Type	22
Sprayer	24
Tire Chains	26
Toolholder	16, 17
Tools, attaching	4
TRACTOR	3
Tractor Cover	26
Trouble Shooting	7
Turnplow	19

**THE GRAVELLY TRACTOR**

**LUBRICATION**

USE ONLY HIGH GRADE LUBRICANTS SUCH AS

ENGINE----- Mobiloil AF (SAE 40)  
 BELOW 32°F Mobiloil Arctic (SAE 20W)

WITH MACHINE LEVEL FILL TO TRY COCK  
 LOCATED ON SIDE OF CHASSIS

FUEL----- USE GOOD GASOLINE LIKE  
 Mobilgas (REGULAR GRADE)

MOWERS & ACCESSORY PARTS--USE GEAR  
 OILS SUCH AS Mobilube GX 140 (SAE 140)  
 FOR WINTER Mobilube GX 90 (SAE 90)

READ INSTRUCTION MANUAL CAREFULLY

MANUFACTURED BY  
**GRAVELLY TRACTORS, INC.**  
 DUNBAR, WEST VIRGINIA, U. S. A.

MODEL **L** TRACTOR NO.

# THANK YOU

For your investment in Gravelly Equipment. It is an investment, for the Gravelly will save you work and worry for many years.

You will gain still greater satisfaction from your powerful Gravelly if you add the tools you need for your other jobs. From time to time we suggest you consult our catalog, or this instruction book. You will find many attachments that will eliminate upkeep and garden drudgery.

Your Gravelly representative will be glad to demonstrate any Gravelly attachment to you any time. There is no obligation involved.

If you require parts and service, our representatives have the facilities to handle your problems. They are specialists in Gravelly Service—have the special tools and training necessary to give you the best possible job at the most economical price.

We sincerely hope you will enjoy the use of your Gravelly Equipment for many pleasant and profitable years.

Yours sincerely,

***GRAVELLY TRACTORS, INC.***

# THE GRAVELY TRACTOR . . .

The Gravelly Tractor is a 5 HP Air-cooled, 4 cycle, one-cylinder Tractor. It is designed and built for the tough jobs . . . furnishes POWER for over 21 different tools and attachments.

It will serve you long and faithfully if you take reasonable care. You will find it is to your advantage to read these instructions carefully and follow them faithfully. You will be rewarded by more satisfaction with your Gravelly Equipment, and fewer repair and maintenance bills.

## WHO MAKES IT?

Gravelly Tractors, Inc., Dunbar, West Virginia. The Gravelly is produced in a plant which specializes in the production of Gravelly Tractors and attachments . . . and nothing else.

## WHO SELLS AND SERVICES GRAVELLY EQUIPMENT?

The Gravelly is distributed through more than 36 Distributing Companies. Working with these Distributing Companies is an organization of independent Dealers. Each of these Dealers and Distributors is fully equipped to give prompt and efficient service—have parts in stock which means service fast . . . without waiting on factory shipment of parts.

## GUARANTEE

The Gravelly Guarantee is on the Back Cover of this User Manual. **NOTE: To qualify for this guarantee, it is necessary for you to return the self-addressed, postage free card bound into this booklet. Do so promptly, for your own protection.**

## FUEL

Use a good regular gasoline. We recommend Mobilgas (A Socony-Vacuum Product). Tank capacity is about 1 and  $\frac{3}{4}$  gallons. **DO NOT USE HIGH TEST GAS.**

## LUBRICATION

The capacity of the Chassis is FIVE PINTS (5 pints) of motor oil. Usually your Tractor will be filled with gas and Oil when it is delivered. If not, remove Oil Filler Cap (See: Plate 1) and put in 5 Pints of good oil. We recommend:

**SUMMER:** Mobiloil AF (SAE 40).

**WINTER:** Temperature range from 32° to 10° F., use Mobiloil Arctic (SAE 20—20W).  
Temperature range from 10°F. and below, use Mobiloil Special or 10W (SAE 10)

Filling the Chassis (Transmission) furnishes oil for both the Motor and the Transmission. **WARNING:** Do not use Transmission Greases or Oils. Only Motor Oils.

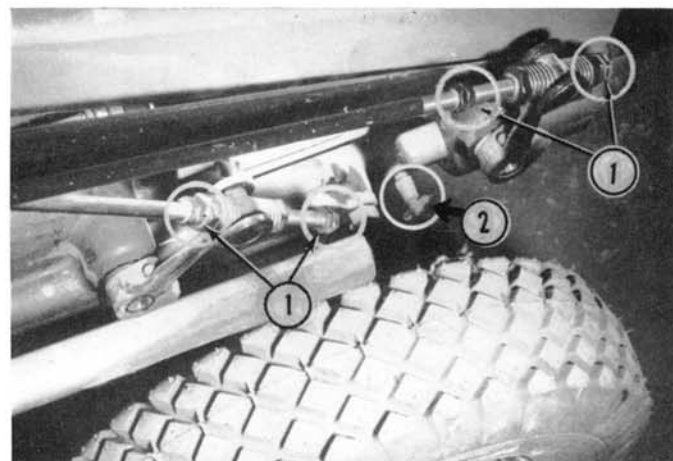


PLATE 2

(1) Clutch Adjusting Nuts, (2) Oil Level Try Cock.

## CHECKING OIL LEVEL

To check the oil, be sure tractor is setting level. Run the tractor a few minutes before checking. Locate the Oil Try Cock Valve. (See Plate 2) Loosen the Valve by turning the wing. If oil runs out, you have enough. If not, add oil until oil begins to run out, then stop. **TOO MUCH OIL IS AS BAD AS NOT ENOUGH. DO NOT ADD MORE THAN ENOUGH OIL TO BEGIN TO RUN FROM THE TRY COCK VALVE.**

Sometimes under heavy working conditions, the small hole in the Try Cock Valve will become filled with dirt. In this case it is wise to unscrew the T completely when checking oil level.

## OIL BATH AIR CLEANER

Gravelly Tractors are equipped with an Oil Bath Air Cleaner. Empty the cleaner often, and fill the cup with Mobiloil AF (SAE 40) as required, according to directions on the Air Cleaner.

## VALVE TOP OIL

During the breaking-in period, use Mobil Upperlube mixed with the gasoline according to the directions on the can. This will furnish lubrication for the Valves, which is needed during this period particularly. We recommend the continued regular use of Mobil Upperlube in your gasoline. It will almost insure against a sticking valve.

## BREAKING-IN LUBRICATION—OIL CHANGES

When your Gravelly Tractor is new, the Motor Oil should be changed after the first 20 hours of work. After that, oil change depends upon usage. A good practice is to change every 50 hours worked.

The drain plug is at the rear of the Tractor on the bottom of the Chassis. When changing, flush the oil out under pressure by turning the Starting Pulley SLOWLY by hand.

## GAS THROTTLE

The Gravelly uses a hand-feed gas throttle attached to the left handle. Depressing the throttle gives more gas, bringing it up feeds less.

## GOVERNOR

The Governor is optional. It will automatically feed the fuel to the engine according to the work-load. This saves wear on the equipment, and makes operation of the equipment much easier.

To operate the Governor Throttle, simply pull the throttle out until the attachment operates at the speed you desire. After this speed is obtained, the equipment will operate at that speed no matter how much load is put on the machine, without further attention from you.

## CHANGING GEARS

The Gravelly Tractor gives you two forward and two reverse speeds. As you stand at the handles of the Tractor: LEFT HAND Lever is gear selector, for high and low speeds.

RIGHT HAND Lever is gear selector for forward and reverse.

See next page for illustration.

**CAUTION:** Always keep your hand on the Reverse lever when you are backing up. Then, if you slip, or get backed into a corner, you can throw the machine out of gear quickly.

You may change either lever without changing the other.


## ATTACHMENT CLUTCH

The attachment clutch is actuated by a lever on the front of the Tractor (See Plate 8).

On the Advance Casting you will see the words IN and OUT embossed on the metal.

When the lever is over the IN, the attachment is in gear. OUT, the attachment is out of gear.

**HINT:** When putting POWER ATTACHMENTS in gear, have the High-Low Lever in Neutral. Then "slip" the clutch,

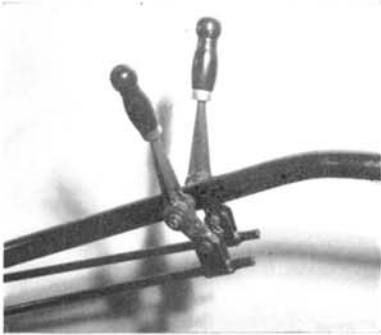

**NEUTRAL:** Both handles in UP Position.

**PLATE 3**



**HIGH:** Left hand lever back and down.

**PLATE 4**




**LOW:** Left hand lever forward and down.

**PLATE 5**



**FORWARD:** Right hand lever back and down.

**PLATE 6**

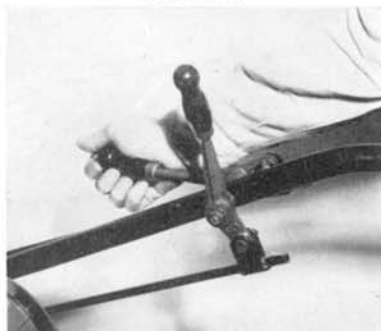


**REVERSE:** Right hand lever forward and down.

**PLATE 7**

using the reverse only until you hear or feel the engine "pull down" a little. You can then flip the attachment in gear without raking the Attachment Clutch Gear. This will save wear on the clutch.

**CAUTION:** When attaching or adjusting a POWER ATTACHMENT, always have the Attachment Clutch Lever in the OUT position.

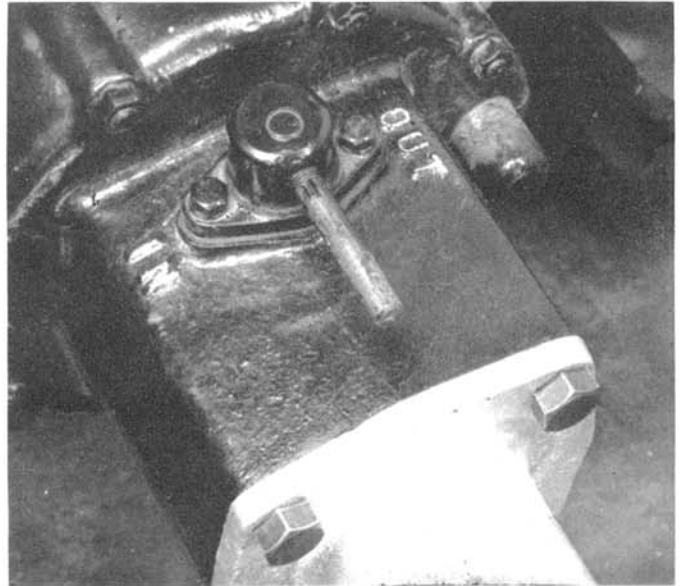

**PLATE 8**

### ATTACHING TOOLS

All Power Attachments and all others, except a few tools which may be hitched on the rear of the tractor, are attached by four bolts to the front of the Tractor. (See Plate 9).

The Attachment Clutch Lever must be in the OUT position when attaching any tool to the front of the Tractor.

**HINT:** If you are alone when attaching tools to the front of the Tractor, it will help if you have a prop (a cinder block works well) to set under the crankcase to hold the Tractor. Get one bolt started, tighten down snug, but do not tighten clear down until you have all the other bolts started.



**PLATE 9**

## PREPARING TO START THE TRACTOR

1. Gear Levers in Neutral Position.
2. Attachment clutch Lever in OUT position.
3. An attachment, or the Attachment Boss Cover (Part No. 288) must be used on the front of the Tractor before starting motor.
4. Be sure the little Valve on the bottom of the sediment bowl under the gas tank is in the open position.

## STARTING THE TRACTOR

The Gravely is equipped with a strap starter. The small hole in the end of the leather starting strap slips over a pin in the pulley at the rear of the tractor. Wind the strap in the direction of the embossed arrow. Put the throttle down about halfway. (If you have a Governor, put the throttle button halfway OUT.) Give a strong, steady pull. Choke as needed.

See Plate 10 for the proper way to wind the strap.



PLATE 10

## COLD WEATHER STARTING

Remember that your Gravely Tractor is an air-cooled, one-cylinder engine, with the spark furnished by a Magneto. If you have trouble starting your tractor during cold weather take the following precautions.

1. Store the Gravely in a heated building, if at all possible. If not, then pre-heat the engine by any safe method. A heat lamp, an electric strap heater, electric reflector heater, etc. **DO NOT USE A BLOW-TORCH OR ANY OPEN FLAME OF ANY KIND! BE SURE TO CHECK FOR GASOLINE LEAKS BEFORE ATTEMPTING TO PRE-HEAT THE ENGINE.**

2. Be sure you have the proper lubricants in the Tractor. (See Lubrication, page 3.)

3. Each engine is a distinct unit like an automobile engine. The best "Choking" method will have to be found by experimentation. As a starter, however, try by pulling the Choke all the way out. Turn over engine until it starts, then gradually return the choke as the engine warms up.

If this doesn't work and the engine floods, pull the engine over several times with the Choke in and the Gas Throttle open. Then try pulling the Choke out for one turn, in, then out again.

4. Spin the engine hard and fast. When the engine is warm, the Gravely will start on the first pull. But in cold weather, the temperature in the combustion chamber is much lower. Often the engine will fire once, but not have enough momentum to run through the firing cycle twice and then carry itself. So it will be necessary to pull hard and fast.

5. Take the spark plug out and warm it good until all possible moisture is evaporated.

6. If the engine doesn't start after a few tries, and all these precautions have been taken, check for mechanical failure. (See: Trouble Shooting). If you still have trouble, call your Gravely Dealer or Distributor.



PLATE 11

## SELF STARTER

Now you start your Tractor as easily as you start your car! New Gravely Electric Self-Starter means push-button starting . . . new ease and convenience in using your Gravely Tractor.

Especially useful for cold-weather starting . . . means a start every time!

## ATTACHING

Installation Instructions are packed with easy Starter Kit. Starter Kit is complete, but less Battery. Uses any standard 6 Volt Automobile or Tractor Battery.

## CHECK OIL PUMP

As soon as the tractor starts, check the oil pump to make sure it is working. To do this, remove the Oil Filler Cap (See Cover) and make sure a good steady stream is flowing.

If the oil isn't flowing, push down on the handles, tipping the tractor back. Hold it back a few seconds, then return it to the usual position. Check pump flow again. **IF IT ISN'T OPERATING, STOP THE TRACTOR IMMEDIATELY.** Call your Dealer.

(A Gravely Oil Pressure Gauge makes this checking easy. Just lift the hood and watch the dial.)

## STOPPING THE TRACTOR ENGINE

On the Magneto (Plate 12) there is a small clip, or button. To stop the engine, depress this button until it "shorts out" the Magneto, and hold it depressed until the engine stops.

Caution: Do not stop the engine by pulling the Choke out. This will flood the carburetor and make starting difficult.

## TIRES

The recommended pressure for the Tractor tires is between 25 and 35 pounds. The less pressure, the more traction. Conversely, the more pressure, the longer the tires will last. Most of our Users find that 30 pounds pressure is right for their jobs.

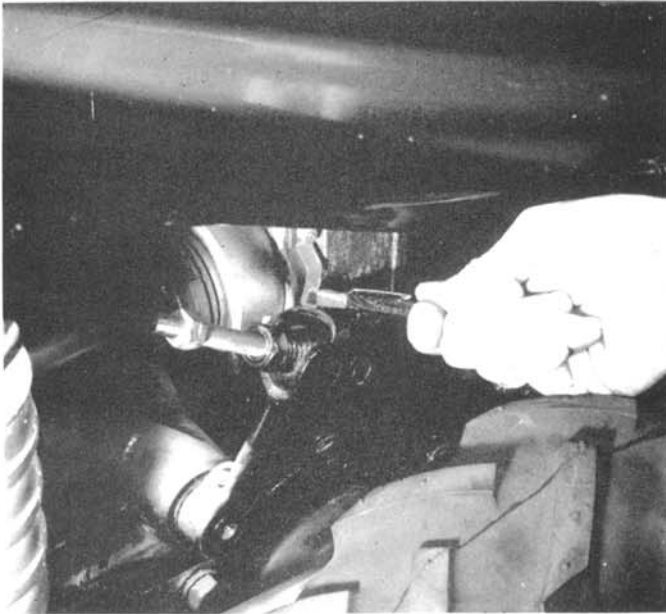


PLATE 12

## ADJUSTMENTS YOU SHOULD KNOW

### SPARK PLUGS

Spark Plug points should be cleaned and adjusted for clearance occasionally. The recommended gap is .033.

### VALVES

Valves can be set in the field if necessary. The clearance between Valve Stem and Valve Plunger is .012.

To adjust Valves, turn engine of tractor over until the compression stroke. (Both valves seated, piston top dead center). Raise the Spring Sleeves. You will need two wrenches, a 9/16" open end, and a 1/2" open end. The 9/16" nut is the lock nut . . . hold it with your wrench and operate the 1/2" bolt with the other, adjusting until the clearance is correct.

NOTE: The clearance is .012 WHEN THE ENGINE IS COLD. DO NOT ADJUST VALVES WHEN ENGINE IS WARM OR HOT.

### CLUTCHES

The Gravely uses a double-acting, cone-type clutch. To take up for wear, tighten the nuts on the ends of the Clutch Rods. If adjustment is needed, your Clutch will "slip" even when locked in position. Unless the Clutch is slipping, let the adjustment alone. (See Plate 2.)

The Gravely Clutch may have a tendency to "creep" a little occasionally, even when in neutral. This is of no consequence and does not mean that there is anything wrong with the Tractor or the Clutches.

### SAFETY CLUTCH

Each Gravely Model L Attachment has a Gravely Safety Clutch, which prevents sudden shocks from harming the attachment or tractor.

It is very important that these clutches be adjusted correctly. If they are too loose, the tractor will not drive the attachment efficiently. If too tight, there is real danger that a sudden shock may injure the transmission or the attachment.

The illustration (Plate 13) shows that proper method of field adjustment. Place a flat bar in the driving slots of the Slip Clutch. Hook a pair of spring scales on the bar 12" from the CENTER of the Clutch. Then adjust the spring tension by tightening or loosening the 6 bolts EVENLY so that it takes 30 to 36 pounds of pressure to make the clutch slip.

### TIMING THE MODEL L ENGINE

Magneto should be set to fire 30 Degrees ahead of top dead center on the compression stroke (which is when both valves are closed).

To accomplish the 30 degree ahead of top dead center firing, proceed as follows:

1. Remove Air Cleaner and Air Cleaner Bracket.
2. Loosen nut on Magneto Coupling.
3. Remove Cylinder head.
4. To ascertain the firing position of the crank, bring the piston to top dead center on the compression stroke (which is when both valves are closed.)
5. While Piston is top dead center, measure how far it is from top of piston to top of cylinder wall. Record this measurement because it will have to be added to 5/16" when timing your Magneto with the motor.
6. Now turn the crank counter clockwise until the piston goes down the cylinder 5/16" plus what you recorded in Step No. 5, from the top of the cylinder wall.
7. While holding the Magneto Shaft Extension counter clockwise (in order to take up any backlash in the gears) rotate the Magneto impulse (inoperative) until the timing marks line up.
8. Be sure there is at least 1/64" end play in the magneto coupling so that it will not cramp the impulse. Insert 1/64" feeler between fiber block and coupling flange before tightening nut. Tighten the magneto coupling nut while holding the timing marks together.
9. Now recheck your settings by backing the piston not more than 2" down the cylinder barrel (to avoid picking up Magneto Impulse) and reviewing the procedure to make sure any backlash has not thrown you off on your measurements.
10. When you are sure that piston measures properly from top of cylinder wall and at the same time Magneto timing marks are lined up together, lock the Coupling Nut in place by bending down tit on lock washer, replace Cylinder Head, Air Cleaner and Bracket.

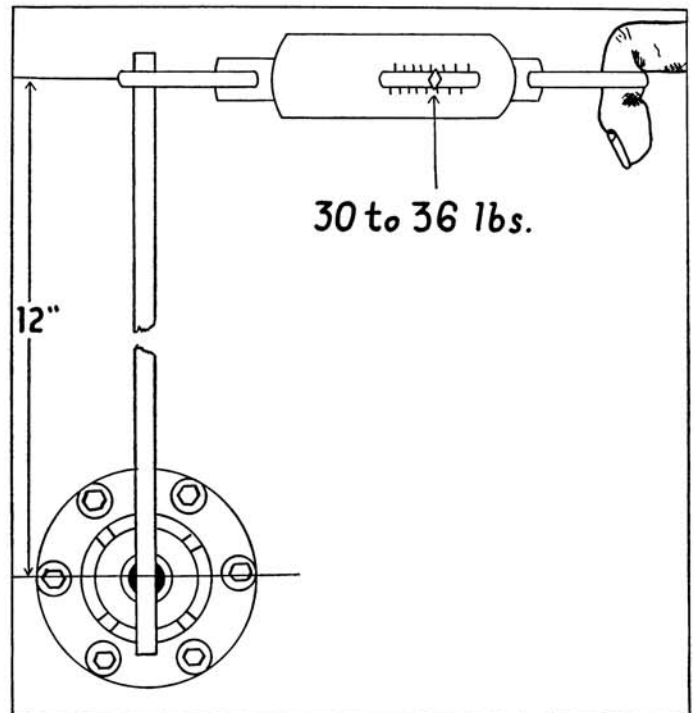


PLATE 13

### CARBURETOR ADJUSTMENT

If it is absolutely necessary to adjust the carburetor yourself, here is the proper way:

Find the Main Jet. (needle valve) It is identified by having a brass T on it. Screw the T in until it is snug—be very careful not to force it or screw it tightly. Then back it out 2 1/2 full turns. Start the tractor. Open the throttle about half-way, or to a fast idle. Let the tractor warm up. Then begin screwing the jet in slowly. As soon as you hear the Motor slow down, STOP, and back the jet out 1/4 turn.

The Air Jet is a screw with a slotted head and a spring

wound around the screw surface. Screw it all the way in, until it is snug. Back out two full turns. Start the tractor. Then begin screwing the Air Jet in until the motor begins to "buck", spit or backfire. Back out 1/8 turn. If motor is still rough, back out another 1/8.

Write for special carburetor instructions.

#### FAN BELT ADJUSTMENT

At some time or another you will need to adjust the fan belt. A thin wrench is helpful but not necessary.

Between the Fan Belt Pulley and the Fan Housing there is a thin, large nut. This nut locks the Fan Pulley Shaft to the Fan Housing. The shaft is in an elongated slot in the Housing. When the Nut is loosened, this will allow you to move the Fan Pulley up or down, to tighten or loosen the belt as needed. After the proper belt tension is obtained, simply tighten the nut down firmly.

If you do not have a thin wrench, remove the nut that holds the Fan Pulley in place. Then unscrew the Fan Pulley until you have sufficient room to get an ordinary wrench in to the nut. After adjustment, screw the pulley back in place and replace the nut.

### OPERATING PRECAUTIONS

#### AIR CLEANER

Your Oil Bath Air Cleaner is one of the most important parts of your Gravelly Tractor. Unless it is kept cleaned out and filled with the proper amount of oil, dust, grit and other abrasives will get into the carburetor and the cylinder, wearing out the rings and often scoring your piston and cylinder. This means expensive repair bills, and poor operating efficiency.

**OUR GUARANTEE WILL NOT REPLACE PARTS THAT ARE WORN BECAUSE OF IMPROPER CARE OF THE AIR CLEANER. FOLLOW DIRECTIONS ON THE AIR CLEANER!**

#### NUTS AND BOLTS

You should have a regular time to go over your tractor and tighten it up. This is routine for any small power equipment, or any large equipment, and is necessary to prevent future difficulty.

This is especially important after purchase—when the tractor leaves the Dealer or Distributor it is tight. But just like an automobile has to have its 1000 mile check, so a Gravelly should have its "tightening up" check after it has been run awhile.

#### OIL FILTER

The Gravelly uses a replaceable oil filter. It is very important that your oil filter be in good operating condition. Therefore, be sure to change it every season, or every 200 hours of work.

**CAUTION: DO NOT ATTEMPT TO CHANGE THE CONNECTIONS IN ANY WAY. BE SURE, WHEN INSTALLING NEW FILTER, TO MAKE EXACTLY THE SAME CONNECTIONS.**

### STORING YOUR GRAVELLY

Although the Gravelly now has attachments that make it a year-round tool, many of our Users do not use the equipment in the winter.

It is important, if you are not going to use the equipment for a time, to know how to store it properly.

1. Clean the Tractor thoroughly with kerosene and a stiff brush.
2. Store tractor in a dry place. Jack it up by some means, usually this can be done by blocks under the axles.
3. Drain the crankcase, flush with kerosene and refill with new oil. (Use a rust preventative oil if obtainable). Operate the engine for two minutes to distribute the oil. Do not get the engine hot.
4. Remove the sparkplug and put 1/2 pint of Mobiloil 10W (SAE 10W) in the cylinder. Turn over by hand several times; leave the piston on top dead center, and then replace the spark plug.
5. Drain the gas tank and carburetor.

### TAKING THE TRACTOR FROM STORAGE

There are six important steps to follow if you want your tractor to start easily and work properly:

1. Drain out any rust preventative oil, and refill with Mobiloil AF (SAE 40).
2. Remove spark plug and put 1/4 pint of Mobiloil 10W (SAE 10W) in the cylinder. Turn over engine by hand (by twisting the starting pulley) several times. If engine stops suddenly during this process,

or if it turns over too easily, showing no compression, See: TROUBLE SHOOTING under "Sticking Valves". Replace spark plug.

3. Fill tank with fresh Mobilgas (Regular).
4. Pump tires up to 30 pound pressure.
5. If oil filter has not been replaced during the last season, it is best to replace it now.
6. Start your Tractor in the usual manner.

### TROUBLE SHOOTING

Your Gravelly, like any mechanical product, is going to break down or be out of adjustment occasionally. This section will deal with the minor difficulties that are corrected easily.

In case of a serious breakdown, or if these suggestions do not cure your Tractor's trouble, always call your Gravelly Dealer. His mechanic is trained in factory methods, has the special tools to repair your equipment quickly and efficiently.

#### TROUBLE

Tractor Fails To Start.

Cause and Cure:

1. Out of Gas. (Don't laugh, it happens!)
2. Not getting gas because the Gas Cut-Off Valve on the sediment bowl under the Gas Tank has been turned off.
3. Engine Flooded. If this is the case, the carburetor will be wet with gas. To cure, turn the tractor engine backwards by hand a couple of times.
4. Spark Plug shorted out by contacting Tractor Hood. To check, lift hood and spin the tractor. Also, check connections to Magneto and to Spark Plug.
5. Spark Plug fouled or wet. To cure, remove, clean or dry, reset at .033.
6. Not getting fire from magneto. Remove spark plug from cylinder head and magneto cable. Turn tractor over, holding magneto cable so the spark will jump to the Cylinder head. If no spark, or very weak spark (less than 3/8"), check connections. If they are all right, magneto is bad. Call your Dealer.
7. Stuck Valve. Occasionally you will find that suddenly—usually overnight, you have no compression. So, of course, the tractor won't start. No compression means that you can spin the motor over by hand easily. When this happens, you have a Valve stuck in the open position. (Exhaust Valve)

Cure: Remove Spark Plug and Head. Use a light penetrating oil, Mobiloil 10W (SAE 10W) mixed half and half with kerosene. Put this on the Valve Head liberally, paying particular attention to the Valve Stem. Then take screwdriver and insert in the slot in the top of the Valve, and keep trying to turn the Valve as the oil works down. The Valve will usually free itself in a few minutes, and turn freely. Remove the screwdriver and turn the Engine over slowly BY HAND, and if the Valve works up and down as the engine turns over, your difficulty is solved. Replace Head and Spark Plug and start Engine. You may have to pull the Strap several times until the oil and kerosene burn out, but it will start quickly.

**CAUTION: It is always a good idea, after the tractor has been idle a day or more, to try to turn the Motor over by hand (forward and back) before you put the strap on it. Occasionally a Valve will stick in the down position. If you try to start the motor with the Valve stuck down, you will tear off the Valve Cam, and usually knock a hole in the Crankcase. If your Tractor Engine will not turn over by hand, follow the same procedure as outlined above until the Valve is free.**

Follow the advice given in these instructions under "Valve Top Oil". It is important enough to repeat. Use Mobil Upperlube Valve Top Oil mixed with the gasoline according to the instructions with this oil. This will furnish additional lubrication for the Head and Valves, and help to prevent any valve sticking.

### HINTS ON HANDLING THE GRAVELLY TRACTOR

The Gravelly is a wonderful tool to work with. You have power to spare for any ordinary—or extraordinary—lawn, garden, or field job. It will save you many hours of drudgery, help you have a better looking home, give you much pleasure in your home or small farm.

These few little tips on how to handle a Gravelly will add to that pleasure. Some of them will take a little practice but it will be time well spent.

### NUMBER ONE: LET THE TRACTOR DO THE WORK!

The most common mistake of the beginner with a Gravely is to try to help the Tractor. Just remember this—the Gravely is much more powerful than you are. Guide it—don't try to manhandle it. Let the tractor do the work! All the pushing you do is wasted effort. All the attempts to hold back will just wear you out. So take it easy!

Stand erect behind the tractor. Stay out from between the handles. Hold the handles in a firm grip, but don't try to squeeze them into little pieces. Walk relaxed and at ease. The tractor will obey your will—learn to use the gears, and to feed the gas as needed.

Give with the tractor in unusual situations. Always remember the tractor is stronger than you—like a horse. Ride with it, and you will always have control.

### NUMBER TWO: KEEP YOUR TRACTOR TIGHTENED UP.

Have a regular time to go over the tractor and tighten up the bolts and nuts. When you are working, take a rest occasionally and check your tractor. Common sense and good care will save you money, let your tractor do its work more efficiently, save you drudgery.

### NUMBER THREE: SLIPPING THE CLUTCH.

Occasionally you will find yourself in the position that your tractors ground speed (forward motion) is a little too fast to do the job right. The tendency is to slip the clutch. But in every case, usually by taking a slightly smaller "bite" at the job it will not be necessary to slip the clutch. The less you slip the clutch the longer the clutch will last.

### NUMBER FOUR: NEVER WORK AROUND AN ATTACHMENT WHEN THE ATTACHMENT IS IN GEAR!

As a matter of fact, the safest thing to do is to stop the tractor whenever you have to do anything to the power attachments.

### NUMBER FIVE: KEEP YOUR FINGERS AWAY FROM THE FAN AND THE FAN BELT.

If you have to work around the Fan or the Fan Belt, STOP the tractor!

### NUMBER SIX: WHEN USING REVERSE, KEEP YOUR HAND ON THE LEVER.

The Gravely is a powerful machine, and it can't think for you. If you put the machine in reverse, and come back too fast, you may stumble, fall, or get pinned against a wall or fence. Always slow down when reversing, keep your hand on the lever, and take it easy. Then if something unexpected happens, you can jerk the lever into neutral and the Tractor will stop.

### NUMBER SEVEN: DON'T BE AFRAID OF THE EQUIPMENT.

The Gravely is a tool. Like any other tool, it deserves respect, but it is made to be used—made to help you do your lawn, garden, and field tasks. Master the equipment and you will find many pleasant hours of relaxation ahead—time when you can be accomplishing a lot of work, and yet have a good time doing it. There is something fascinating about a Gravely, as you will learn. Soon you will have the same affection for it as you have for your faithful car, your favorite gun or fishing rod.

Just remember—let the Gravely do the work!

## LAWN EQUIPMENT

### REEL MOWER INSTRUCTIONS

By attaching the 30" Reel Mower to your Gravely Tractor, you have one of the finest lawn mowers money can buy.

The Gravely Reel Mower is a heavy-duty mower, built to last many years. The adjustments are simple. And with a Gravely you have more than twice the power of the average lawn mower!

The Gravely will give you a better looking lawn because it does not streak or scalp as much as most mowers. You will truly have a lovely lawn if you mow with Gravely!

#### ATTACHING

The Gravely Reel Mower (30" Center Unit) is attached to the front of the Tractor by four bolts, as are all power attachments.

#### LUBRICATION

The Swivel Casting is equipped with an Alemite Fitting. This should be given a shot of Mobilgrease No. 2 occa-

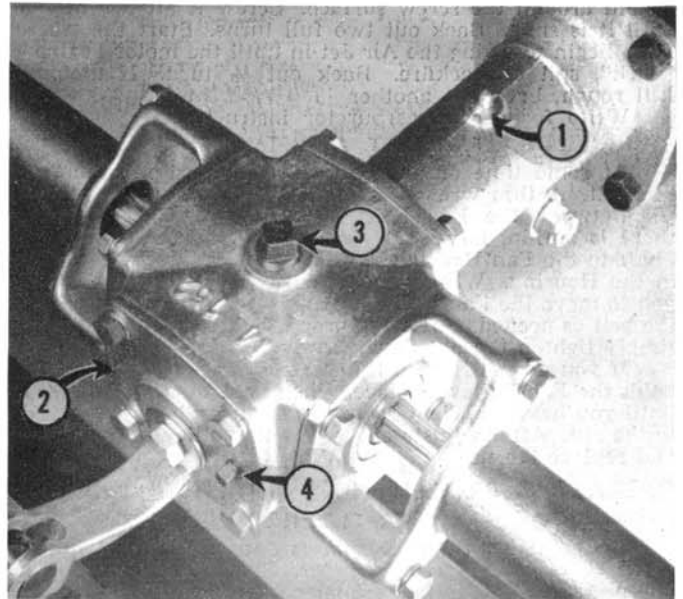


PLATE 14

- |                           |                    |
|---------------------------|--------------------|
| 1. Swivel Alemite Fitting | 3. Oil Filler Plug |
| 2. Strut Casting          | 4. Oil Level Plug  |

sionally, to keep the Swivel lubricated and to prevent rust. (See Plate 14 for lubrication points.)

The Gear Housing should be drained at least once a year, and new oil put in it. To drain, remove the entire M-153 Strut Casting of the Gear Housing.

To replace the oil, or to add oil when needed, remove the Gear Housing Oil Plug and the Oil Level Pipe Plug. Fill the Gear Housing with Mobilube GX-140 until the oil is level with, or begins to run out of, the Oil Level Hole. Never use more oil than is needed to fill the Gear Housing to the bottom of the Oil Level Plug. Too much oil will cause overheating and consequent damage to the gears. Be sure to replace both Plugs before you begin mowing.

The Reel Bearing Alemite fittings should be given a shot of Mobilgrease No. 2 as needed. This lubrication is very important, for the grease forms a water seal around the Bearing. Neglect will cause a rusting out of the Reel Bearing, and a repair job of replacing the Bearing and re-adjustment of the Reel. See Plate 15.

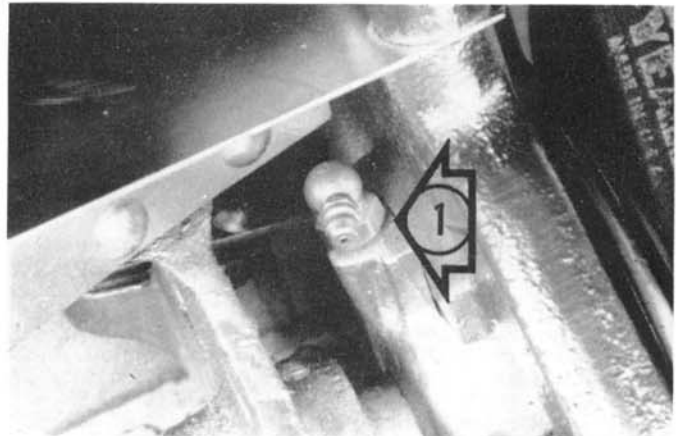


PLATE 15

1. Reel Alemite Fitting


There are four Alemite fittings on the Spacers holding the Rollers in their proper position on the Roller-Bar type of Reel. Use Mobilgrease No. 2 in these fittings, as needed to insure free rolling.

#### ADJUSTING THE HEIGHT OF CUT

Cutting height is adjusted by means of the Height Adjusting Screw (See Plate 16), Height Adjusting Screw Nut, and the Height Adjusting Screw Lock Nut.

Loosen the Height Adjusting Screw Lock Nut, and turn



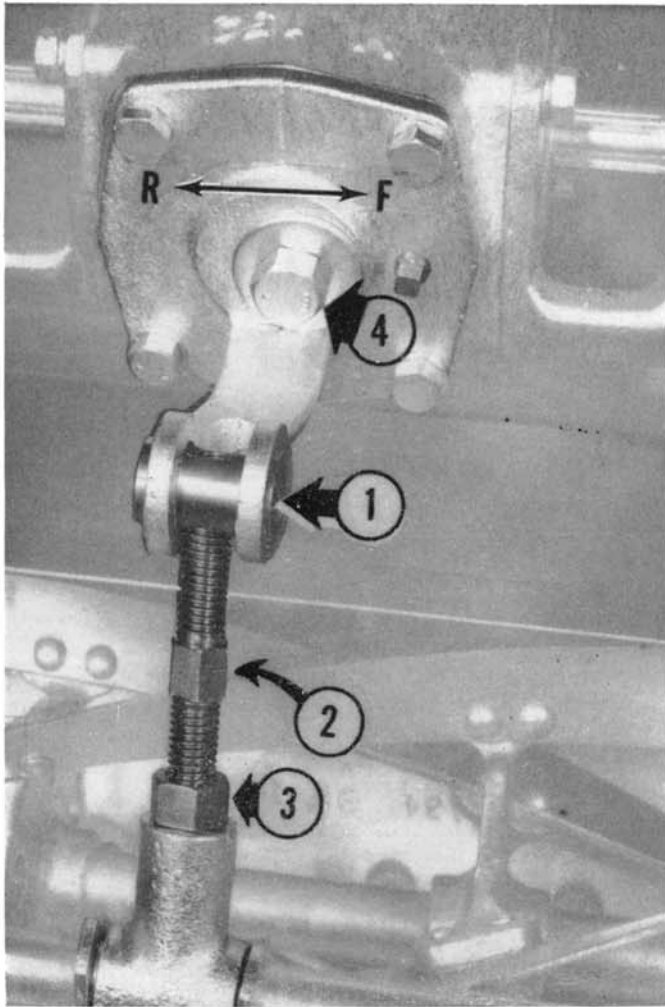

**PLATE 16**


- |                        |                             |
|------------------------|-----------------------------|
| 1. Adjusting Screw Nut | 3. Adjusting Screw Lock Nut |
| 2. Adjusting Screw     | 4. Shifting Fork Bolt       |
- (R position reverses, F position is forward)

the Height Adjusting Screw to the right to raise the height of cut, and to the left to lower the height of the cut. When the adjustment suits your requirements, lock the Height Adjusting Screw Lock Nut to hold the Adjustment, and you are ready to mow.

#### REVERSE LAPPING OF THE REEL

The Reel Mower has a specially designed reverse for lapping the Reel against the Bed Knife. This will eliminate, in many cases, grinding of the Reel. It is advisable to lap the reel in whenever the reel is adjusted against the Bed Knife Bar.

To lap the Reel, loosen the bolt on the front of the Gear Housing. (Plate 16). (Be sure tractor is stopped, attachment out of gear.) This bolt is off center. To reverse

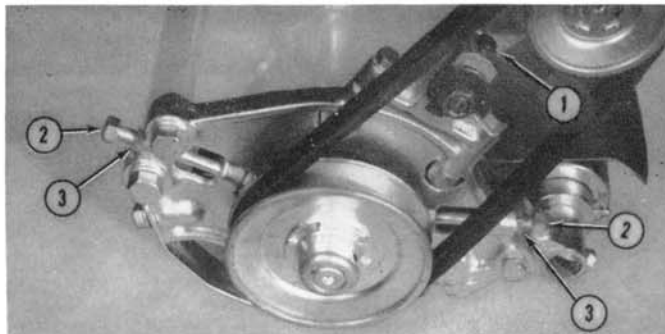

**PLATE 17**

- |                              |                        |
|------------------------------|------------------------|
| 1. V Belt Adjustment Bolt    | 2. Reel Adjusting Bolt |
| 3. Reel Adjust Bolt Lock Nut |                        |

the Reel, slowly roll the Reel back and forth with the hand, pushing the bolt to the opposite side of the housing. This engages the reverse. When it is engaged, tighten the bolt.

Then apply a 60 grit lapping compound to the Reel with a paint brush with the attachment running at normal speed. (Watch your fingers!) Allow the Reel to lap in reverse until the Reel makes good contact with the Bed Knife Bar along its entire length.

To put the Reel back in forward gear, use the same procedure as described above, except that you push the bolt to the right.

#### REEL ADJUSTMENT

Although not needed often, the correct adjustment of the Reel means the difference between a good mowing job and a poor one. To do a good job, the Reel must contact the Bed Knife Bar evenly and lightly along its entire length.

To test, use a piece of paper at different points on the Bed Knife Bar and turn the Reel with your hand. If the Knife cuts the paper cleanly at each point, the Reel is in adjustment. If the Knife does not cut the paper cleanly at all points, you must adjust the Reel.

To adjust, loosen the Locking Nut and turn the Rear Screw (See Plate 17) either left or right. Tightening (turning to the right) will move the Reel away from the Bed Knife Bar. Loosening (turning to the left) will allow the Reel to press harder on the Bed Knife Bar.

For example, suppose that you are facing the Reel, and have tested the cut. You find that the Reel is light on the left side, heavy on the right.

Loosen the Lock Nut on the Rear Left Adjusting Screw, then loosen the Screw slightly. Loosen the Lock Nut on the Rear Right Adjusting Screw, and tighten the Screw slightly. Test. Repeat if necessary. Then tighten the Lock Nut to hold the adjustment. The Front Adjusting Screws control the tension of the Spring which holds the Reel against the Bed Knife Bar. Adjust so the Reel has firm contact with the Bar, cutting grass cleanly.

Occasionally the Bed Knife Casting will warp very slightly. To correct this warping, merely reverse lap. (See "Reverse Lapping")

#### INSTALLATION OF V-BELTS

To install the V-Belts, loosen the Height Adjusting Screw Lock Nut, releasing the Height Adjusting Screw. Then turn the Height Adjusting Screw until it releases the Reel Assembly from the Strut.

Raise the Mower slightly and swing the reel backwards (toward the tractor) until the belts are loose on the pulley. Remove the old belts and replace with the new belts. After the new belts are in place, return Mower to normal position, replace the Height Adjusting Screw and readjust the mowing Height.

#### ADJUSTMENT OF V-BELTS

Your mower is equipped with a special V-Belt Adjusting Bolt (See Plate 17). The V-Belts should have one inch of play in them. That is, without forcing, but with firm pressure on one side of the V-Belt, (halfway from each pulley) it should give one inch.

To tighten, turn the Belt Adjusting Bolt clockwise. To loosen, turn the Belt Adjusting Bolt counter-clockwise. When tightening, if the Belt Adjusting Bolt is turned as far as it will go and the belts do not tighten, the belts should be replaced.

#### GANG MOWERS

Large mowing areas deserve the same care and treatment that you give your smaller areas. By attaching two 25 inch Gang Mowing Units to your GRAVELY Rotary Mower, your large lawns can be mowed in a minimum of time. There is no streaking and no scalping with the Gang Units. Like the Rotary Mower, they have Swivel Action which allows them to follow the contour of the ground. They do not depend upon traction for power—they are completely power driven from the tractor.

With the Gang Mowing Units attached to your Rotary Mower, you mow a swath 72 inches in width—and the mowing is done cleanly and evenly.

#### ATTACHING

The Gang Units are attached to the Center unit (30" Reel Mower).

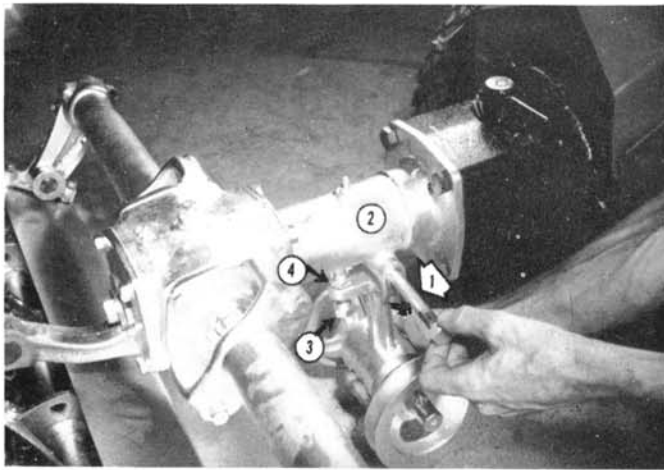


PLATE 18

1. Wing Bracket Bolt
2. Reel Mower Swivel Casting
3. Belt Adjusting Screw
4. Belt Adjusting Screw Lock Nut

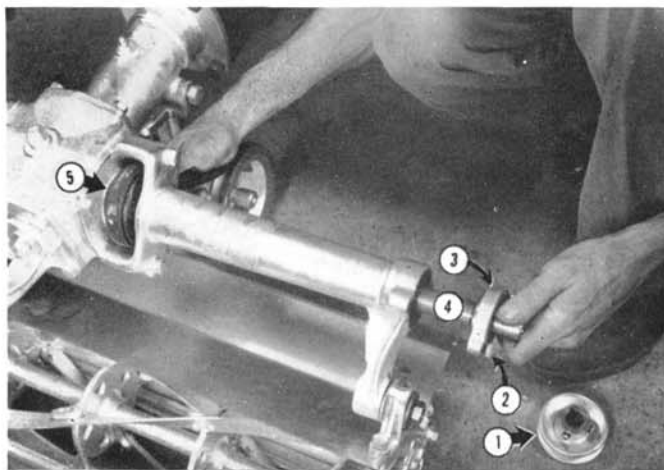


PLATE 19

1. Outer Drive Shaft Pulley (3")
2. Bearing Cap Screw
3. Bearing Cap
4. Outer Cross Shaft
5. Belt and Inner Drive Shaft Pulley

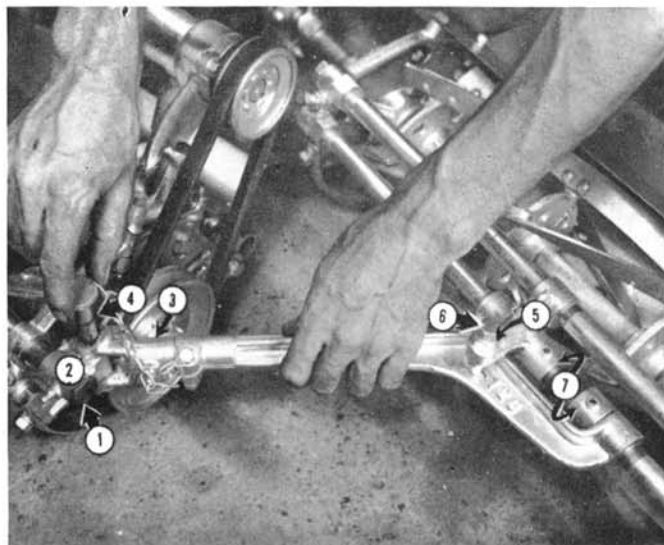


PLATE 20

1. Pivot Stud
2. Pivot
3. Leader Swivel
4. Leader Swivel Pin
5. Height Adjusting Screw Lock Nut
6. Height Adjusting Screw
7. Leader Thrust Collars

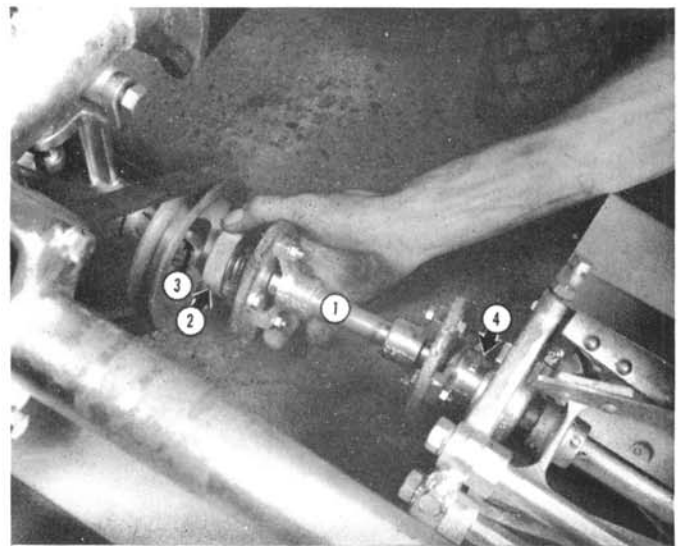


PLATE 21

1. Universal Drive Assembly
2. Locking Ring
3. Locking Ring Ball Receiving Holes
4. Wing Spider

They come to you in three assemblies: 1. The Power Take Off, 2. Universal Drive Assembly, 3. The Leader (attached to the Gang Unit)

#### ASSEMBLY OF POWER TAKE OFF

The Power Take Off for the Gang Units is assembled to the Center Unit as shown in Plate 18.

#### ATTACHING BELTS TO POWER TAKE OFF

First, remove the belts from the pulleys on the Center Unit, by the method discussed in the "REEL MOWER" Instructions.

Remove the outer drive Pulley, first loosening the Allen Set Screws.

Loosen the Bearing Cap Screws, and pull the Outer Cross Shaft assembly out until it is possible to insert the Inner Wing Drive Pulley (Splined) and Belt into the opening as shown in Plate 19.

Replace the Outer Cross Shaft, through the Inner Drive Pulley turning slightly as needed until it engages the Gears in the housing. Replace all parts.

#### ATTACHING LEADER

Remove the Top Tie Rod Bolt, replace with the Leader Pivot and Leader Pivot Stud as shown in Plate 20.

Attach the Leader Swivel with the Leader Swivel Pin, as demonstrated in Plate 20.

On a new mower, the Leader Swivel Pin may not drop easily into place. This is caused by a protective film of paint on this pin and paint film on inside of the holes. A quick rub with very fine emery paper will remove the paint coating, and the pin will drop in place easily.

#### ATTACHING UNIVERSAL ASSEMBLY

The Universal assembly is attached to the Reel Shaft by Set Screws. First, place the Wing Spider in position and force on the shaft until it is seated in place against the Reel Shaft Bearing. Then tighten the set screws. (See Plate 21.)

To attach the Universal to the Power Take Off, Grasp Locking Ring as shown in Plate 21, pulling it back against the spring. Then place the Assembly on the Power Take Off Shaft, so the Locking Ring Balls will be in line with the holes on the Power Take Off Shaft. Releasing the ring will then lock the Universal securely to the Power Take Off Shaft. To remove, simply reverse the procedure.

#### ADJUSTMENTS

##### WING DRIVE V BELTS

Tension of the Wing Drive V Belts is adjusted by means of a Bolt and Lock Nut on the Power Take Off. (See Plate 18).

Turning the bolt to the right increases tension, to the left decreases tension. Proper tension is found by applying firm pressure in the center of the belt. It should "give" approximately one inch, without forcing.

## LEADERS

The Gangs must run parallel to the Center Unit for best results.

After the Gangs are assembled to the Center Unit, adjust the leader by loosening the Set Screws in the Thrust Collars. Move the Leader in whichever direction is necessary by firm taps with a hammer. When lined up, put the Thrust Collars flush to the Leader and tighten the Set Screws. (See Plate 21).

## CUTTING HEIGHT

Cutting Height is adjusted by means of the Wing Height Adjusting Screw (See Plate 21).

Loosen the Lock Nut, turn the screw Clockwise to INCREASE mowing height, Counter-clockwise to DECREASE mowing height. When properly adjusted, tighten lock nut.

## LUBRICATION, REEL ADJUSTMENT, ETC.

All other adjustments and lubrication exactly the same as for the Center Unit.



PLATE 22

## ROTARY KNIFE MOWER

The Rotary Knife Mower is a versatile mower that mows the finest lawn grass or the toughest weeds. It has very low maintenance, because of its simple construction and minimum of parts, and mulches cut grass to a finely shredded material that makes lawn raking unnecessary.

Since it is operated by the Chain Saw Drive, full instructions will be found on pages 19 and 21.

## LEAF MULCHER

The Leaf Mulcher is an optional assembly which is used with the Rotary Knife Mower to clear your lawn areas of leaves quickly and easily (see page 21).

## LAWN ACCESSORIES

### RIDING SULKY

A Gravely Riding Sulky allows you to mow comfortably while you ride. You can cover an amazing amount of ground in a little while with a Riding Sulky, and the Tractor is even easier to handle.

Handicapped persons often do a lot of their own mowing with the Sulky when otherwise it would often be out of the question.

The Sulky has a comfortable spring seat, pneumatic tires. It requires the Rear Hitch.

**ATTACHING:** See Rear Hitch, page 25.

### ADJUSTING THE SEAT

The Seat is attached to the Seat Spring by a bolt through one of two holes in the Seat Spring. Adjustment is made by attaching the Seat to whichever Bolt Hole is most comfortable.



PLATE 23

It is sometimes necessary to "level" the Tractor when using the Sulky on the Rear Hitch, to keep the Handles from interfering with your knees on turns. This is done in two ways:

First: To level the Tractor, loosen the Ball Stud Lock Nut. To raise the handles, turn the Ball Stud clockwise. To lower the Handles, counter-clockwise. The bottom of the stud has an opening to fit a  $\frac{1}{4}$ " Allen Wrench.

**AFTER ADJUSTMENT, TIGHTEN THE BALL STUD LOCK NUT TIGHTLY AGAINST THE REAR HITCH FRAME.**

Second: If there is still interference, the Handles may be adjusted by loosening the Handle Bolts closest to the Rear of the Tractor, and moving the Handles upward or downward in the slots until they are at the proper height. Then tighten the Handle Bolts down **tightly**.

### LUBRICATION

The only lubrication required is an occasional shot of Mobilgrease No. 2 in the Alemite fittings on the Wheel Discs.



PLATE 24

### ROLLER SECTION

For a smooth, velvety lawn, you will need the Lawn Roller Attachment for the Gravely Tractor.

The Roller is 32" wide, has rounded edges to prevent injury to the lawn, and weighs 655 pounds when loaded.

The powerful Gravely easily handles the Roller and the operator, who rides comfortably on a spring seat.

**ATTACHING:** See Rear Hitch, page 25.

### FILLING THE ROLLER

The Roller is filled with water by removing the large

Brass Plug found on the right-hand side as you look from behind the Roller towards the Tractor Handles.

Of course, the Roller should be rolled until the Plug is at its highest point for the maximum weight. Have no hesitation about filling it as full as possible . . . the Tractor has plenty of power for the job. Be sure to replace the plug **TIGHTLY**.

#### LUBRICATION

The only lubrication required is an occasional greasing of the Axles. Just remove the Cotter Pin, slip off the large Washer and put a generous amount of Mobilgrease No. 2 around the Axle, put back the Washer and Cotter Pin.



PLATE 25

#### DUAL WHEELS

Dual Wheels are often helpful when you are mowing steep slopes, and terraces. They lower the center of gravity, give more traction. Full information on page 14.

#### EXTENSION AXLES

Extension axles serve the same purpose as Dual Wheels. They extend the wheels to 35 inches. Full information on page 13.

## WEED MOWING EQUIPMENT



PLATE 26

### SICKLE MOWER

The Gravelly Sickle Mower Attachment is a rugged, dependable mower that makes the toughest weed and brush mowing jobs easy. It will mow anything that will go between the Guards. Swivel Action allows the blade to follow the ground contour for a clean cut, and it is Slip Clutch protected against damage.

The Sickle Mower is furnished with a 42 inch Blade. Longer blades are available from your Dealer for special

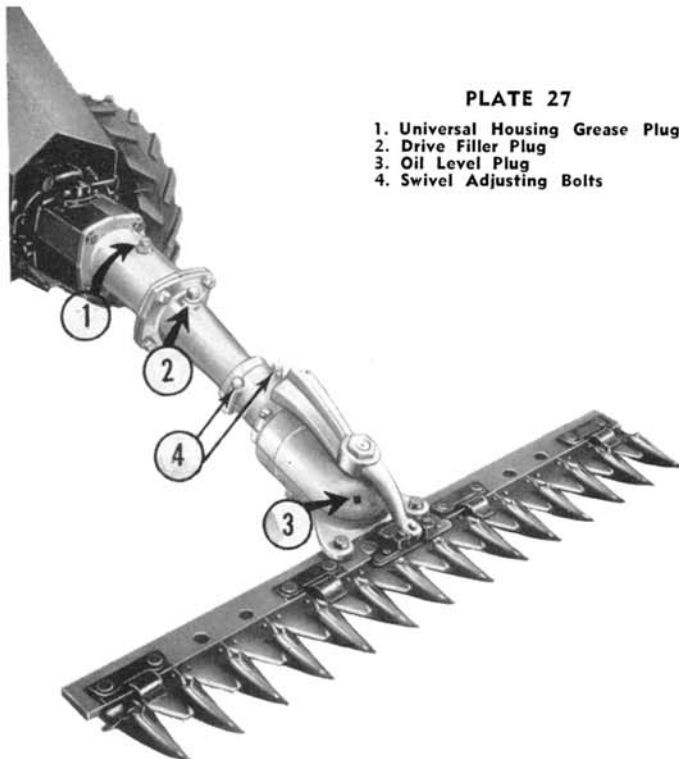


PLATE 27

1. Universal Housing Grease Plug
2. Drive Filler Plug
3. Oil Level Plug
4. Swivel Adjusting Bolts

purposes. The Blades are furnished with three-inch sections for heavy mowing. For fine mowing, two-inch Sections are available.

#### ATTACHING

The Sickle Mower is attached by four bolts to the front of the Tractor, like all other power attachments.

#### LUBRICATION

You will find three Oil Plugs on the Sickle Mower Drive Column. See Plate 27. The Oil Plug on the Column section closest to the Tractor lubricates the Universal. Remove the plug and fill about half full of MOBILGREASE No. 2.

Sometimes, since this Universal Joint needs attention only occasionally, it is more convenient to remove the Slip Clutch, take out the four bolts that holds the lower Column to the Universal Housing, and slip the Housing partly off. Then you can put a generous application of Mobilgrease No. 2 directly on the Universal Joint, covering it all over with about an inch or inch and a half coating of the Grease. Re-assemble the parts, being sure to tighten firmly the large nut that holds the Slip Clutch.

You will find two Oil Plugs on the Crank Housing section next to the Blade. The smallest is the Oil Level Plug. To check the oil, remove this plug while the attachment is on the Tractor. If oil runs out, you have enough. If it doesn't, remove the large Oil Plug on the column directly above the Crank Housing and fill until oil runs out the Oil Level Plug hole. Use MOBILUBE GX-140. **Do not continue to add oil after the oil starts to flow from the Oil Level hole.**

When you fill this part of the Sickle Mower for the first time, or after draining old oil, it will take one-half pint.

Be sure to replace ALL plugs before using the Sickle Mower.

#### LUBRICATING KNIFE AND BLADE

While the Sickle Mower is working, juices from weeds and grass will furnish sufficient lubrication. However, the Knife and Bar will rust when not in use.

To prevent this rusting, wipe the Knife and Bar with a cloth moistened with light oil. Put on a thin coating.

If you are going to store the Sickle Mower for any length of time, we recommend careful cleaning and an application of Mobilgrease No. 2 to all unpainted parts.

#### ADJUSTING THE CLIPS

The Clips that hold the Knife to the Bar should be checked and adjusted frequently. If these clips are not adjusted properly, grass will foul between the Knife and Guards and cause "bunching" or piling up of the grass and inadequate feed-off. Also, fine grass will not be cut because the Knives will give enough so that the grass is knocked into the space between the Knives and the Guards instead of being sheared cleanly.

The Clips should be adjusted closely enough to hold the Knives in firm contact with the Shear Plates on the Guards, but not tightly enough to bind. The Knife should slide back and forth easily with the pressure of a finger and thumb.

The usual method is to knock down the Clips gradually with taps from a light hammer.

If your mower has seen quite a bit of use, the iron in the Clips may have "crystallized" slightly. This does not affect operation, but a sudden sharp blow from a hammer may crack or break the Clip. So tap the Clips down lightly and firmly.

## KEEP THOSE BOLTS TIGHT

Any Sickle Mower, since it has a very fast change of lateral direction taking place every few seconds, is subject to some vibration. The Gravelly is built and balanced carefully, and although vibration is held to a minimum, it is not eliminated.

For this reason, in certain critical places, special bolts with a high thread count to the inch are used, and special locking nuts.

But in spite of these engineering precautions, the vibration will loosen bolts and nuts after so long. Therefore it is wise to periodically check and tighten the bolts and nuts on the Attachment. You should check before you start a job, and in very heavy cutting, we recommend that the bolts and nuts be checked frequently and retightened if necessary.

## CARE OF THE KNIVES

A sharp Sickle is the first requirement of any mowing job for satisfactory results. A gapped, dull Sickle Knife will chew through coarse weeds and brush, but you will run into trouble in fine grass, and not get a clean cut.

Sharpen your knife often. In fact, it is best to have an extra Knife around, sharpened, so you can change quickly if you are caught in the middle of a mowing job. That way you can keep a sharp Knife on your Sickle Mower, and have a sharp Knife in reserve at all times.

To remove the Knife for sharpening, remove the Knife Bracket Screws and slip the blade out either side. **WHEN YOU REPLACE THE BLADE, ALWAYS BE SURE THESE SCREWS ARE TIGHT.**

The Knife Sections should be ground at the same angle they were originally. It is usually fairly easy to follow this angle. Your Dealer has a hand Sickle Grinder that has a special grinding cone the right pitch for grinding the Knives, (See page 26) or for a small charge he will sharpen your Knives for you.

## ADJUSTING THE SWIVEL ACTION

A very important feature of the Gravelly Sickle Mower is the swivel action of the Cutter Bar. This swivel action is adjusted by means of the two bolts on the upper (towards the tractor) part of the Crank Housing.

When these bolts are tight, the Bar is held rigid. When they are loosened, the Bar will swivel and follow the contour of the ground.

The bolts should be adjusted tight enough so that the Bar will hold its position until lowered, and loose enough so the Bar's own weight will cause it to tilt according to the slope or contour of the ground.

## ADJUSTING THE GUARDS

The Guards should always be kept in alignment. If one Guard gets bent up and another down, it will not cut fine grass. Use a light hammer and knock the Guards up or down until the Knives on the Sickle lay flat on the Shearing Plate of the Guards.

Always keep the Guard Bolts drawn up tight.

## TROUBLE SHOOTING

### 1. Losing bolts and nuts.

Tighten bolts and nuts periodically.

Most people who lose bolts and nuts from the Sickle Mower are trying to mow in high gear at a fast speed. Excessive speed will exaggerate the vibration, and cause bolts and nuts to loosen much faster than normal. Always mow at a normal walking speed.

### 2. Bunching or piling of cut grass or weeds on the Blade. . . .

also called improper feed-off of cut material.

There are several reasons for this—it may be one, or a combination. First of all, check Guard alignment, Knife alignment, and the sharpness of the Knife. Correct any of these conditions that are not right.

The usual cause is excessive mowing speed. It is im-

portant enough to repeat . . . always mow at a normal walking speed.

Another cause is letting one end of the Sickle Mower drag up already cut material. In normal operation, there is a three or four inch space next to uncut material during a cut. But if you take a smaller "bite" of uncut material and let one end of the Bar gather up cut material, it will bind the Knife, and drag the material you are cutting so it will pile up.

Another cause that is often a contributing factor is letting your Mower get rusty and gummy. This increases the friction on the cut material. Always keep the Bar clean of gum and rust.

The Slip Clutch may not be adjusted properly. In this case it will hesitate during a cut, and the forward speed of the Tractor will cause uncut material to be pulled loose and rammed in the Knives. Uncut material will also jam the Knives unless they are sharp, especially in fine grass. See "Adjusting Slip Clutch."

## 3. Excessive vibration.

Usual cause is that the Wearing Tip on the end of the Actuating Lever is badly worn, or perhaps even lost. Or it may be loose due to neglect of keeping the Wearing Tip tightly bolted to the Actuating Lever. A badly worn bracket will also contribute to excessive vibration. Or, again, you may be trying to mow too fast, and running the mower at high speed.

## SKIDS

Skids which fit under the Cutter Bar and raise it off the ground are available at your Gravelly Dealer's. For most of your work, they will not be necessary. But they are handy for pasture mowing, where you want to cut weeds out and let the grass grow, and for a few other purposes.

If you use four Skids, they are put directly under the first and fifth Guard from either end. The Guard Bolts are moved and the Skid Bolts put in the vacant holes, using the same Guard Nuts. Adjusting spacers are furnished with each Skid, and with these you can regulate the height of cut. We do not recommend the use of only two skids.

## CAUTIONS

The Sickle Mower Knives are sharp. Never reach down to clear the Mower, or do any adjusting whatsoever near the Sickle Bar, unless the attachment is out of gear, and the Tractor stopped. Never handle the attachment by the Guards . . . if you must move it, grasp it by the Column and one end of the Sickle Bar. Never put your fingers between the Guards when moving the attachment!

Try to keep out of wire, rocks, tin cans, etc. The Slip Clutch will protect your attachment and your Tractor, but these will cause minor nicks in the Knives, which will cut down on your mowing efficiency.

Remember to mow at a normal walking speed.

## MOWING SLOPES

You can mow a 60% slope with a Gravelly Tractor and Sickle Mower Attachment, when using Dual Wheels or Extension Axles.

## ROTARY KNIFE MOWER

The Rotary Knife Mower can be used for weed cutting, as well as fine lawn mowing. It will handle weeds of almost any height, and will shred them into small pieces that in most cases will eliminate raking. Full instructions will be found on pages 19 and 21, since it is used on the Chain Saw Drive.

## RIDING SULKY

The Riding Sulky is often used with the Sickle Mower for pasture mowing, and when using the Sickle for lawn mowing with the two inch Sections. Full Instructions on page 26.

## WEED MOWING ACCESSORIES

### EXTENSION AXLES

Extension Axles are used to give a lower center of gravity, and make working on steep slopes easy and efficient.

They serve about the same purpose as Dual Wheels. On some jobs, where very steep slopes are mowed (for example, levees, railway embankments, etc.,) the Extension Axles and Dual Wheels both may be used with a special length Cutter Bar on the Sickle Mower. Equipped this way, the Tractor will mow anywhere a man can walk. The chief

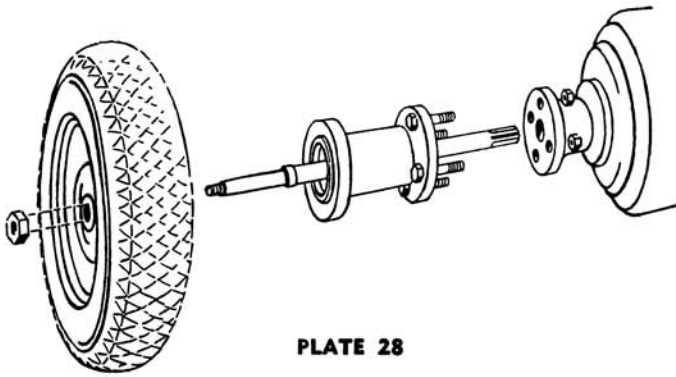


PLATE 28

advantage of the dual wheels as compared with the Extension Axles is that with the Dual Wheels you have double the amount of driving surface in contact with the ground.

**ATTACHING**

First, remove the Hub Cap from the Tractor Wheel. Then, unscrew the large elastic stop nut that holds the Wheel.

Now block up the Tractor so the Wheels are free of the ground.

If you have a Wheel Kicker, screw it on the Axle and tap with a hammer until the Wheel "breaks loose" from the tapered Axles. Then take off the Wheel.

If you do not have a Wheel Kicker, insert a tapered punch or wedge BETWEEN the Axle Housing and Wheel Hub and drive down gradually, wedging the Wheel loose from the tapered Axles.

Remove the four cap screws from the Cap, and take off the Cap and Oil Seal. The Axles will now slide out easily.

Insert the Splined Axle of the Extension Axle in place of the short Axle, lining up the Splines with the Gears inside the Tractor by turning gradually until they slip into place.

Now insert the screws through the holes in the Extension Axle and the Tractor Axle Housing, put on the nuts and draw tight.

Replace the Wheel and the Wheel Nut.

Store your Short Axle for future use, first coating it thoroughly with Mobilgrease No. 2.

**LUBRICATION**

None required.

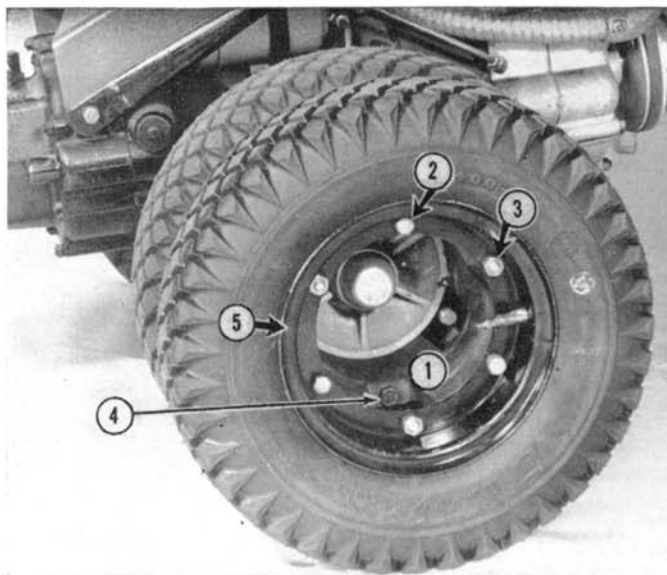


PLATE 29

- 1. Dual Wheel Spacer
- 2. Rim Securing Bolt
- 3. Rim Securing Nut
- 4. Spacer Securing Bolt
- 5. Wheel Rim

**DUAL WHEEL**

Dual Wheels will increase the usefulness of your Tractor, especially if you have any mowing to do on steep

slopes. The Dual Wheels will allow you to mow on a 60% slope without difficulty!

They are useful wherever you need traction—for example, in using the Bulldozer Blade, mowing terraces and slopes with either the Rotary Knife, Sickle or Reel Mowers, and when you want to haul very heavy loads on the Hauling Cart.

**ATTACHING**

Remove every other one of the screws that hold the Wheel Rim to the Tractor.


Use the long screws furnished with the Dual Wheel Spacer, inserting them in the recessed or cut-out parts of the Spacer. Attach the Spacer to the wheel by these long screws. (Be sure tire valve is in a recess).

Take out every other screw in the Wheel Rim of the second Tire, line up the holes with the holes in the Spacer, insert the screws and tighten down.

**LUBRICATION**

None required.

PLATE 30

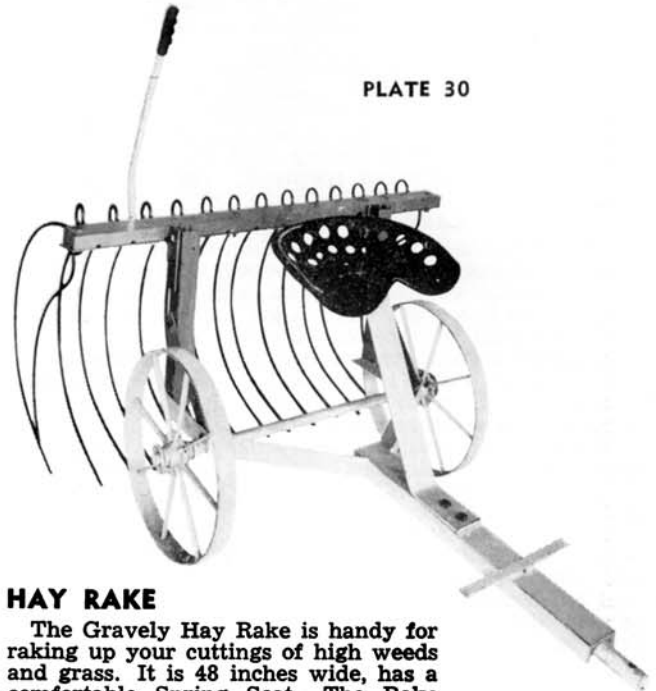

**HAY RAKE**

The Gravelly Hay Rake is handy for raking up your cuttings of high weeds and grass. It is 48 inches wide, has a comfortable Spring Seat. The Rake Lever and Tractor controls are within easy reach.

**LUBRICATION**

The only lubrication required is an occasional greasing of Wheels. To lubricate the Wheels, remove the Cotter Key and slip the Wheel off. Dab a generous amount of Mobilgrease No. 2 on the axle and inside the Wheel Hub, replace the Wheel and Cotter Key.

**ATTACHING**

See: Rear Hitch Instructions, on page 25.

**GARDENING EQUIPMENT**

**ROTARY PLOW ATTACHMENT**

The Rotary Plow is a unique attachment—there is nothing like it. It gives you a deep, even seedbed in one operation. It is easy to handle. It will work new ground. It is power-driven—does not depend upon traction to operate!


**ATTACHING**

The Rotary Plow Attaches to the front of the tractor by four bolts. The Angle Adjusting Bracket must also be attached by two of the four attaching Bolts.

**LUBRICATION**

The Oil Plug is on top of the Gear Housing. Fill with about one and one-half pints of MOBILUBE GX-140. When it is necessary to replace oil, always drain out the old oil (by taking the Angle Adjustment Bolt loose, on the tractor, and turning the attachment upside down) and replace with new.

The Swivel Casting should be given an occasional shot

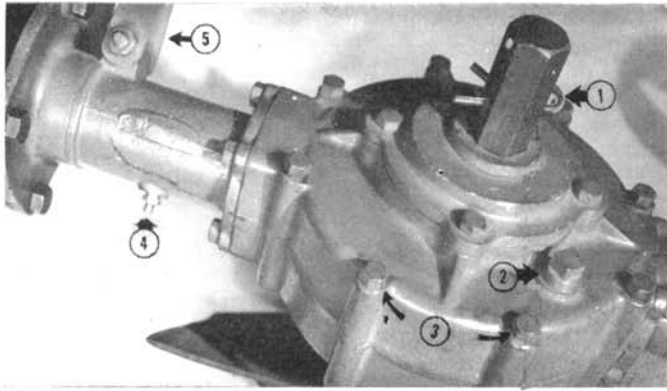

**PLATE 31**

(1) Depth Adjusting Clip, (2) Oil Filler Plug, (3) Attach Dirt Shield by these bolts, (4) Swivel Alemite Fitting, (5) Angle Adjusting Handle.


of MOBILGREASE No. 2 as needed, by means of the Alemite fitting. (See Plate 31.)

**ADJUSTING DEPTH OF CUT**

The large Pin or Clip in the Hex Shaft is the first depth adjustment. The higher up on the shaft you insert the pin, the farther down will go the Blades and the deeper the furrow will be. The lower you insert the Pin, the higher the blades and the shallower the furrow. (See Plate 31.)

Ordinarily the Pin is inserted in the second hole from the top for plowing. For transporting, it is usually placed in the last hole at the bottom.

The final depth adjustment is made by sliding the Wheel Bracket Clamp Screw up or down on the slotted Wheel Bracket. The lower you set the Clamp Screw, the deeper you will plow. (See Plate 32.)

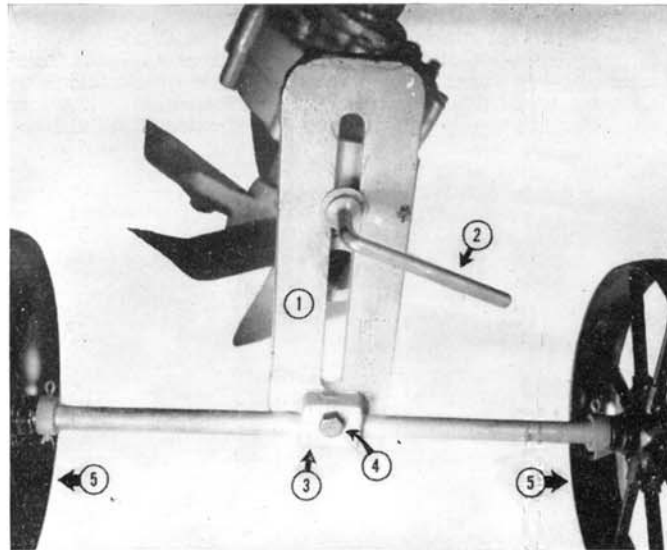

**PLATE 32**

(1) Wheel Bracket, (2) Wheel Bracket Clamp, (3) Axle Clamp, (4) Axle Clamp Screw, (5) Depth Wheel.

**ADJUSTING WIDTH OF CUT**

The width of cut is governed by the position of the Wheel Bracket in relation to the Depth Wheel that rides in the furrow. The closer the Wheel Bracket is to the Depth Wheel in the furrow, the narrower the cut. The farther away, the wider the cut. (See Plate 32.)

**ADJUSTING PLOWING ANGLE**

Proper angle adjustment of the Rotary Plow makes the difference between easy and difficult operation. The plow must be adjusted to your soil conditions, and this adjustment is made by increasing or decreasing the angle adjustment.

When you plow for the first time, the best way to proceed is to set the angle adjustment at half-way in the slot. Be sure it is tight so it will hold. Then try a furrow or two.

If there seems to be an excessive side drag to the left, increase the angle towards the horizontal.

If the side drag is to the right, decrease the angle towards the horizontal.

To increase or decrease the plow angle, loosen the nut on the Adjusting Bolt, and move the Adjusting Handle up or down, retightening firmly.

A few experiments and you will have your plow adjusted to the soil. Then plowing is simply walking behind your tractor while it does the work!

**DIRT SHIELD**

The dirt shield for the Rotary Plow is optional at no extra charge. This flat metal shield attaches to the top of the Rotary Plow Housing by removing two of the bolts, inserting them through the two metal brackets, and replacing.


The dirt shield is used to direct the "throw" of the dirt. By bending it up or down, you can scatter or concentrate the dirt thrown by the blades, and put it right where you want it.

**PLOWING YOUR LAND**

To plow your land, first run a furrow down the center of the land to be plowed. Then turn the tractor at the end of the furrow by pivoting it, so the right hand Depth Wheel is in the furrow you have just made. Continue this way, so that dirt is always thrown to the center, turning at the end of each furrow, dropping the right wheels of the Tractor and Depth Wheels into the furrow until your plowing is completed.

If you are plowing a large area, you will soon be able to "pull" the tractor around the corners without pivoting. On a small area, it will be necessary to pivot each time.

This pivoting can be hard work unless you know this little trick. When you are ready to turn, bear down on the handles until the tractor is balanced. "Slip" your clutch gently, holding back slightly on the right handle. The transmission will pull the tractor right around without much effort on your part. A little practice will soon make you adept at this maneuver, and will make your plowing still easier.

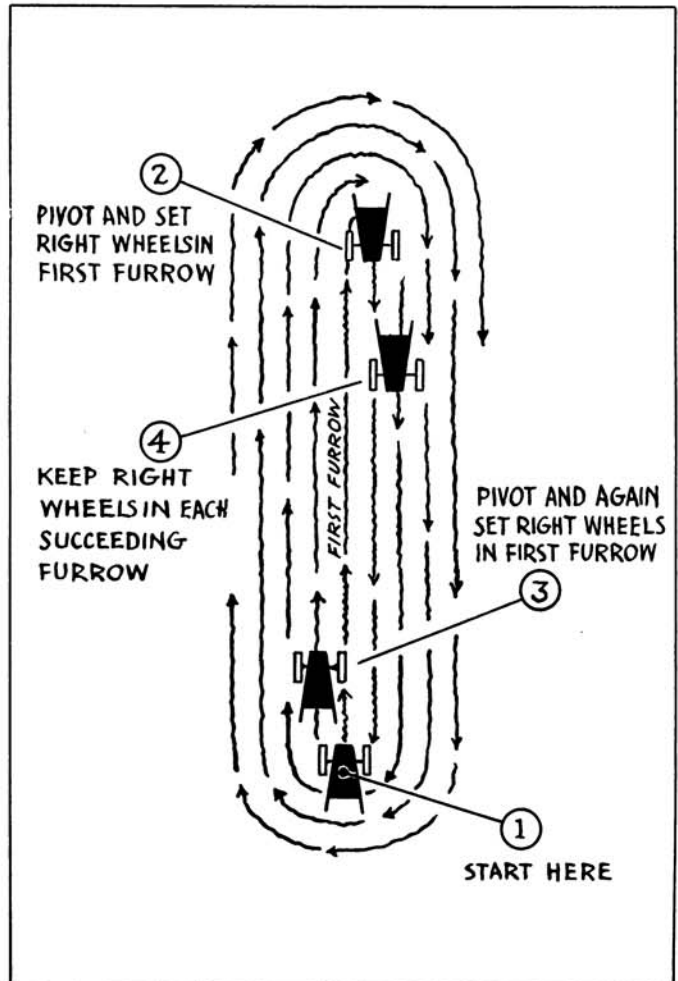

**PLATE 33**

## PLOWING WITH STANDARD OR GEAR REDUCTION WHEELS

Gear Reduction Wheels slow the forward speed of the tractor, but allow the attachment speed to remain the same. This means that even the toughest soil can be plowed easily with the Gravely Rotary Plow. (See page 15.)

However, many soils are plowed satisfactorily with standard wheels. Occasional jobs of plowing in very tough soil, sod, etc., can be handled by making two plowing cuts . . . one down to about three inches, then a second plowing getting the full depth desired.

Also, the use of chains for standard wheels seems to meet the requirements of some of our users.

Experiment, and consult your dealer. He will be glad to help you decide, and will demonstrate the Gear Reduction Wheels at no obligation, at your request.

### OTHER USES

Your Rotary Plow can be useful for a number of different tasks that you won't suspect until you become used to it. The following are a few uses that our Users have told us about, which you may find helpful.

1. **DITCHING** . . . The Rotary Plow, especially when equipped with a special long Hex Shaft (available at your Dealer's) will do a very creditable job of ditching. The procedure is the same as in plowing, except normally only one pass is required in plowing. In ditching, make one cut fairly shallow. Drop the plow further, and make the second cut, and continue until the depth limit of the shaft and adjustments are reached. Do not drop the wheels into the furrow when ditching, but "straddle" the cut. A fairly heavy angle will also help, by throwing the dirt neatly out of the ditch for you.

2. **PLANTING TREES AND SHRUBS:** If you have several small trees and shrubs to plant, remove the Depth Wheels and Adjusting Bracket from the front end of the Rotary Plow Attachment. Then take the Adjusting Handle loose from the Adjusting Bracket. Turn the plow until the shaft is vertical.

Then put the attachment in gear, spot it in the place you wish to make your hole, and let the plow eat its way down. It will prepare a hole just about right for evergreens, small shrubs and trees.

3. **MAKING HILLS:** When planting Sweet Potatoes and other crops that require hills, it is easy to make the hills at the same time you plow.

The method is to start plowing right down the center of the space you want the hill. Continue as in regular plowing until you have the hill the right width. Then move over to the center of where you want the next hill, repeat the process and so on until all the ground is prepared.



PLATE 34

## GEAR REDUCTION WHEELS

Gear Reduction Wheels are indispensable when you are plowing very hard ground, sod land, or Gumbo with the Rotary Plow. They are also very useful when used with

the Snowblower, and in some cases either of the Saws. They **must** be used with the Turn Plow.

The Gear Reduction wheels slow down the forward speed of the Tractor about half, but the attachment speed remains the same.

This means a much better job of plowing, for example, because the Plow Blades strike the ground twice as many times per foot traveled.

### ATTACHING

Remove the Hub Cap of the Tractor Wheel. Unscrew the elastic stop nut.

Block up the Tractor so the Wheels are at least 6 inches from the ground.

If you have a Wheel Knocker, screw it on the Axle and tap with a hammer until the Wheel "breaks loose" from the tapered Axles. Then take off the Wheel.

If you do not have a Wheel Knocker, insert a tapered punch or wedge BETWEEN the Axle Housing and Wheel Hub and drive down gradually, wedging the Wheel loose from the tapered Axles.

Put the Pinion Gear on the Tractor Axle, with key in place.

Pack inside of the wheel with a pound or pound and a half of Mobilgrease No. 2.

Slip the Wheel over the Pinion, matching the four holes in the Axle Housing with those in the Geared Wheel.

The Wheel will only go on one way—with the short stub fitting into the ½ moon cutout on the Axle Housing rim.

Insert the four bolts and tighten down good and tight. The Wheel should carry between 30 and 35 pounds of air, if using Rubber Tired Gear Reduction Wheels.

Height adjustment is made by removing bolts in axle housing, rotating housing, re-inserting bolts.

## CULTIVATING

You plow your ground only once or twice a season, but you cultivate many times. The Gravely Cultivator will save you many hours of hard, back-breaking hand work—make gardening a real pleasure by removing the drudgery!

The Gravely Cultivator uses all Cultivating Tools interchangeably on the same Toolholder. It is quick and easy to adjust to cultivate from eight to 30 inches . . . wider cultivation is possible by the purchase of extra Parallel Bars.

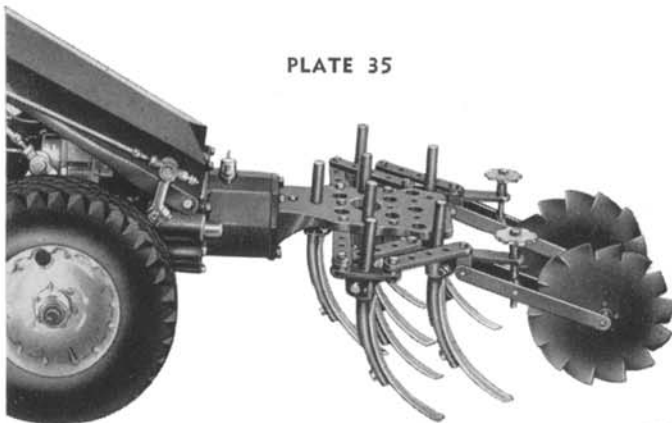


PLATE 35

### ATTACHING THE TOOLHOLDER

The Gravely Cultivator can be attached to either the front or rear of the Tractor. Most people prefer the front, since the Tools are all easily visible as you work, and control of the Tools is easy by slight pressure on the handles.

To attach to the front, simply bolt the End Casting to the front of the Tractor, in the same manner as all front hitch attachments, using the four bolts furnished.

### ATTACHING THE SHANKS AND TOOLS

The Shanks are inserted in the Shank Holders from the bottom. First, loosen the hexagon head cap screw in the side until the Shank slips easily into place. Move the Shank up or down until it meets your requirements, then tighten the cap screw until the Shank is held firmly.

There are five Shank Holders already attached to the Cultivator in the proper positions. These may be moved, if desired, although this is seldom necessary. Additional Shank Holders may be purchased and attached to suit your needs, if desired.



The Tools are divided into two classes—those that require the "One-Hole" shank, and those that require the "Two-Hole" Shank. All Cultivating Tools except the Furrowers, Hillers, Shovel Steel and Turning Shovel require the "One-Hole" Shank.

To attach to the Shanks, simply bolt in place with the bolts and nuts provided.

Changing from one tool to another only requires the switching of the Tools on the Shanks, unless you need a "Two-Hole" Shank where you have a "One-Hole" on the attachment. In that case change the Shanks also.

### ADJUSTMENTS

Depth Wheels are part of the Cultivator, whether used on the front or rear of the Tractor. They are used to set the depth the cultivating tools penetrate the ground.

With the Depth Wheels toward you turning the Hand-wheel to the right will give deeper cultivation; to the left, shallower cultivation.

Usually the Depth Wheels are all the adjustment you need. However, if necessary, you can adjust the Shanks in the Shank Holders up or down to meet your requirements.

### PARALLEL BARS

The Parallel Bars can be adjusted in several different ways, depending upon the task. See next page. Usually it is necessary to disassemble the Parallel Bars from the Depth Wheels to make these different set-ups.

### OPERATING HINTS

#### HOW TO CULTIVATE

Cultivating depth and how close to plants to cultivate are individual problems and preferences. However, there are certain tips that may help you. You can set the Shanks individually, for example, so your Cultivator will be going deep in the center, and barely stirring the dirt next to the plants. This will save a lot of hand hoeing, and will not damage the plants when done with care.

Of course, you must plant your rows wide enough to accommodate the Tractor when you intend to use the Cultivator. The normal row width is about 32-36 inches. Wider rows should be used for plants that spread widely, unless you intend to shield the cultivator so you won't damage the plants.

Occasionally a User tells us that he is not getting good results in hard ground, or very stony ground. The Cultivator will have a tendency to bounce up when it hits an obstruction. You can eliminate this very simply and inexpensively by filling a cloth or burlap bag with about 50 pounds of sand and laying it on the Toolholder. This will hold the Toolholder down, and does not make any appreciable difference in the handling of the Tractor.

Incidentally, the Cultivator is very good for stirring deep litter in brooder houses.

### REAR CULTIVATOR

For full information, see "Rear Cultivator", next page.

### PEG TYPE HARROW

The Peg Type Harrow is necessary to prepare soil for planting when the Turnplow is used with the Gravely Tractor. The Harrow attaches to the front of the Tractor, has adjustable-pitch Pegs. It is 48 inches wide, 20 inches long, teeth set in three rows, 6 to a row.

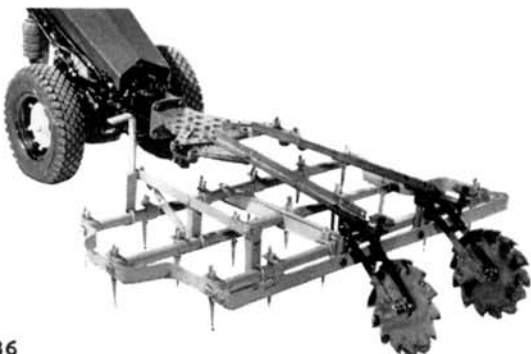


PLATE 36

### FERTILIZER DISTRIBUTOR

The Gravely Fertilizer Distributor will spread Fertilizer, Lime and other materials through six adjustable spouts, from one to 30 inches wide.

It spreads from 200 to 2000 lbs. per acre, quickly regulated by a simple adjustment. Special plates are also furnished to make side-dressing and other specialized fertilizing tasks fast and easy.

Instructions for the assembly of the Fertilizer Distributor, its operation, and a coverage chart are packed with the unit.

However, since the unit is made by another manufacturer, attachment of the unit to the Tractor must be carried out as shown in Plate 37.

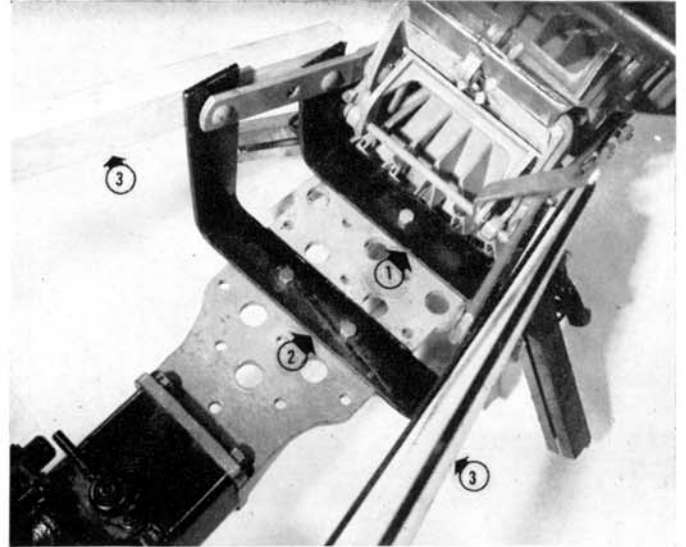


PLATE 37

1. Small U Bracket 2. Large U Bracket 3. Wooden Handles

### SEEDER

Two to four Seeder Units may be used with the Gravely. They are fastened to a bar type Hitch four feet in width, with holes an inch apart so you can adjust to sow any width row desired.

Each Seeder handles the smallest vegetable seed as well as seeds as large as Bush Lima Beans, planting them all evenly and accurately. Row marker is standard equipment.

#### ATTACHING

The Seeder attached as shown on Plate 38.

#### OPERATING INSTRUCTIONS

Instructions for adjusting plates, care and operation are packed with the Seeder.

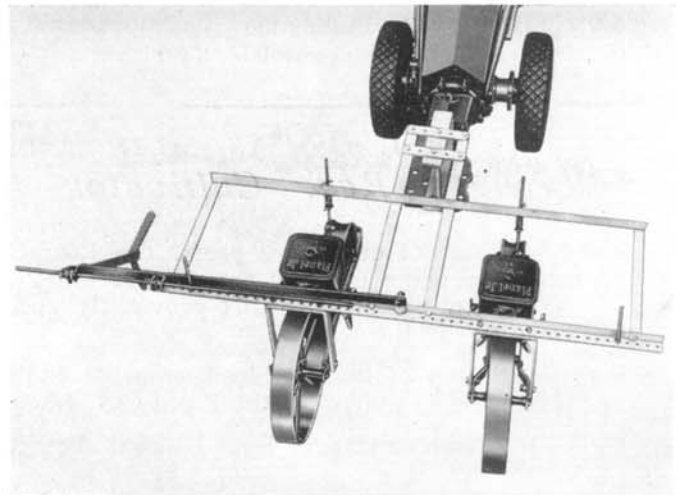


PLATE 38

# Cultivating Tools . . . All Tools Used on the Same Toolholder

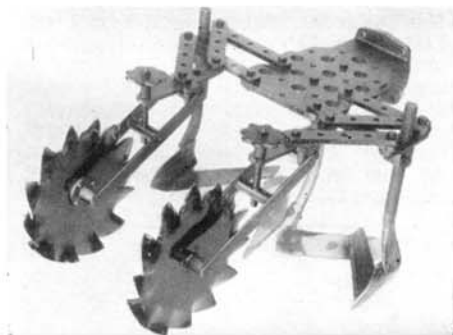


PLATE 39

**SWEEP AND HOE SET-UP** uses an improved Sweep in the center and a right and left Gravely Hoe on either side. The Sweep may be obtained in 8, 10, 12 and 18-inch sizes. The Sweep clears the center of weeds and trash, and the special Gravely Hoes eliminate the majority of hand work close to the plants.



PLATE 40

**7 STEEL V SET-UP** uses one Depth Adjusting Wheel with the parallel bars arranged to form a V. Depth is obtained by a single adjustment of the Depth Wheel. The cultivator will follow the contour of the ground closely, and the last two steels shield foliage and vine crops so they will not be bruised by the wheels.

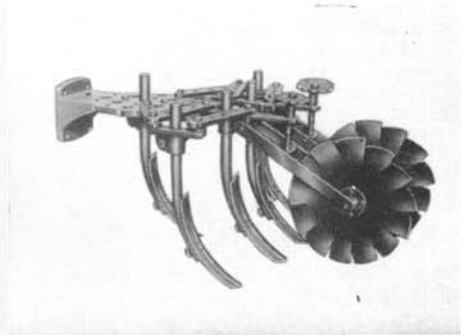


PLATE 41

**5 STEEL SET-UP** is the standard arrangement, uses 1 1/4" steels. Extra steels and shanks may be purchased. The picture, Plate 35, on page 16 shows the method of arrangement when seven steels are used. Steels are available in 1 1/4", 1 3/4", and 2 1/4" sizes. All cultivating tools are used on the same toolholder, are interchangeable.

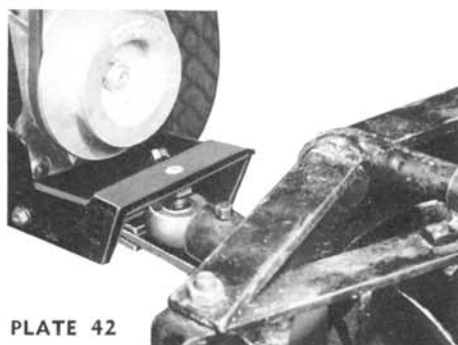


PLATE 42

**DISC HARROW** The Rear Disc Harrow is used mostly for cultivation since the Gravely Rotary Plow gives a perfect seedbed without any type of harrowing or dragging. The Disc Harrow requires the Rear Hitch. It is attached as shown. An occasional squirt of Mobiloil on the Axle is the only lubrication required. Pitch of the Discs is adjusted by releasing the Clamp Screw, and adjusting the pitch of the discs to your requirements.

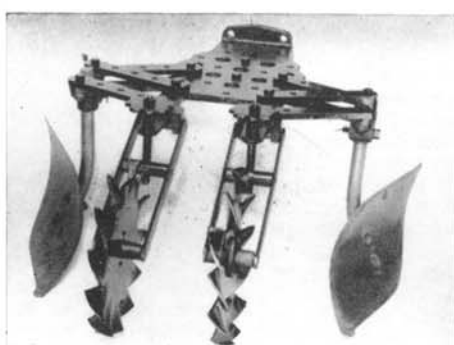


PLATE 43

**6-INCH HILLER SET-UP** uses right and left hillers, can be used for closing rows as well as hilling. They throw dirt away from or around the plants, as you desire. You can use a furrower in the center at the same time, bringing the dirt from the center of the row to the hillers which in turn heap it around the plants.

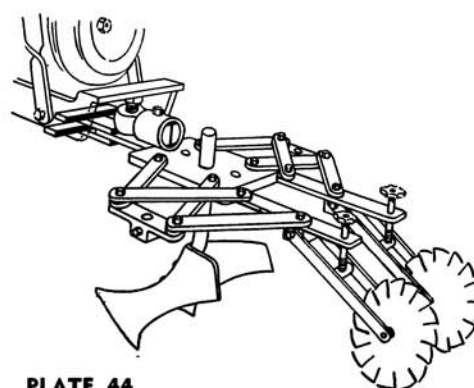


PLATE 44

**FURROWERS** are available in 10 or 12-inch sizes, may be used front or rear to lay off rows for planting. Many users also find it a good tool for digging potatoes. For smaller furrows, seven-inch shovel steels are available. These are very handy for laying off small seed crops, and can be used for center row cultivation.

## Rear Cultivator

Many of our Users prefer the Rear Cultivator, because when used on the rear of the Tractor, the cultivator loosens the dirt previously packed down slightly by the wheels.

Set-up of tools, and adjustments for depth are the same as shown for the Front Cultivator.

Attach as shown. Rear Hitch is required.

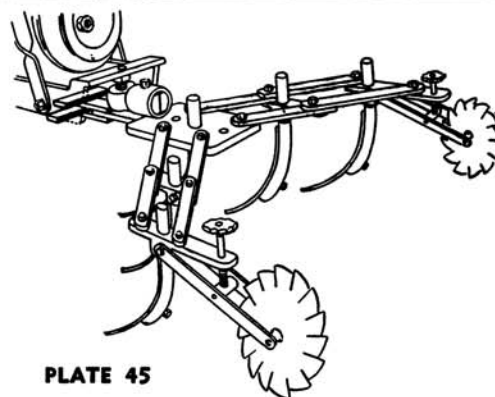


PLATE 45

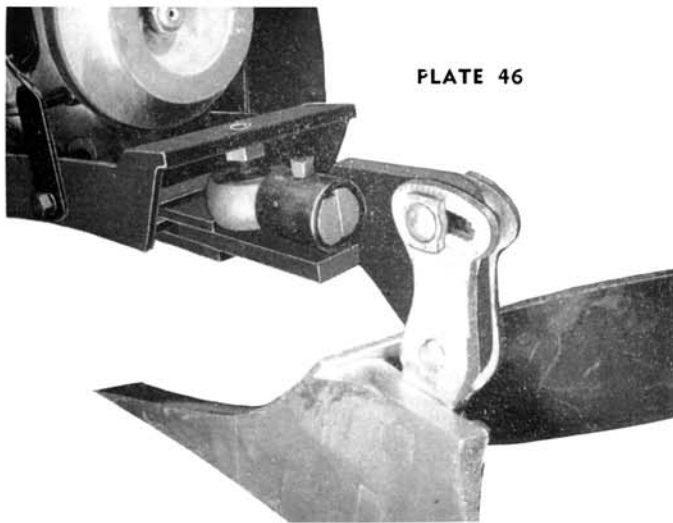


PLATE 46

## TURNFLOW

For those who prefer it, a conventional 7-inch Turnplow is available. Gear Reduction wheels should **always** be used with the Turnplow.

### ATTACHING

The Rear Hitch is required. Attach as shown in Plate 46. The Split Socket is used.

### ADJUSTMENT

The depth adjustment is obtained by the degree the plow point tilts. If it is tilted up, it will plow shallower; if it is tilted down, it will plow deeper.

To adjust the tilt of the point, loosen the bolt, nut, and corrugated clamp washer at the point where there is a serrated slot in the Casting. When you get the proper degree of tilt, tighten the bolt and nut down to hold it in position.

## Combination:

## CHAIN SAW – CIRCULAR SAW – ROTARY MOWER – LEAF MULCHER

With this combination you can perform 4 different kinds of work. 1. cut timber, 2. clear land, 3. mow weeds, and brush, and 4. mulch leaves—all with the same power drive. To change from job to job, simply switch the tool you want to use!

**All of these tools are used on the same drive!**

### ATTACHING DRIVE

The drive is attached to the front of the Tractor by four bolts, like all other power attachments.

### LUBRICATION

On the Swivel Casting is an Alemite fitting. This should be given an occasional shot of Mobilgrease No. 2 as needed.

When the Drive is on the Tractor, on the left side (as you face the Drive from the front of the Tractor), is an Oil Filler Plug (large) and an Oil Level Plug (small). (See Plate 48.)

Remove both Plugs. Using an oil gun, fill with Mobilube GX-140 until oil begins to run out the Oil Level Hole. NOTE: The drive housing (Part No. M-150) must be in the vertical position during this filling. That is, the Shaft that drives the Tool must be perpendicular to the ground.

If you don't have an oil gun, a small funnel with a length of copper or rubber tubing attached will facilitate this filling.

Be careful not to use too much oil . . . when it is level with the Oil Level Hole, Stop.

Replace both Plugs before operating the attachment.

### ADJUSTING SWIVEL ACTION

On the bottom of the Swivel Casting, (Part No. M-181) is a Box, and you will notice that the Casting is split at that point, with a large bolt and nut through the Boss.

When using the Rotary Knife Mower, the Swivel should be loosened until the Mower will follow the ground contour with its own weight. When using the Circular Saw or the Chain Saw, usually you will be using this same adjustment

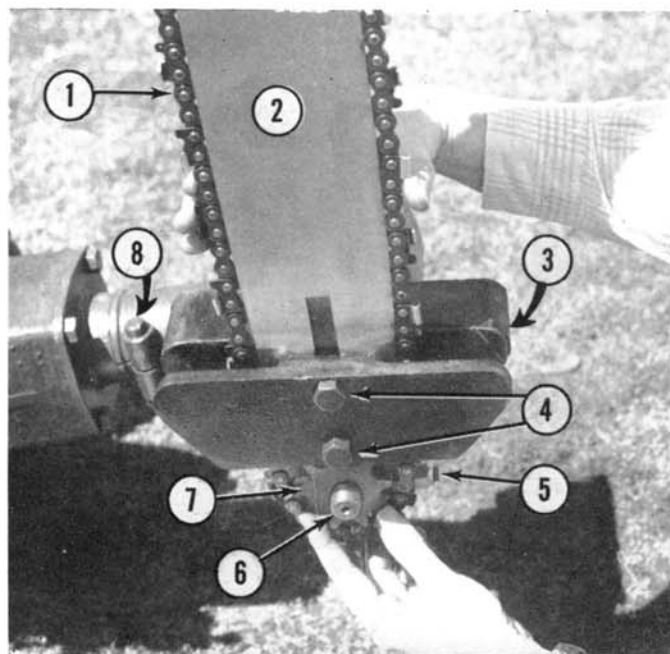


PLATE 47

(1) Chain, (2) Chain Blade, (3) Bracket, (4) Guide Bar Clamp Bolts, (5) Bracket Clamp Bolts, (6) Attachment Drive Shaft, (7) Sprocket, (8) Angle Adjustment Bolt.

as a clamp, to hold the Saws in the position desired. To clamp, simply turn the attachment to the point desired, then tighten the bolt down firmly.

## CHAIN SAW INSTRUCTIONS

### ATTACHING

To attach Chain Saw Assembly to the drive, remove the large nut (Left hand thread!) on the bottom of the Attachment Drive Shaft, and remove the three collars.

Loosen the Bracket Clamp Bolt on the Split end of the Bracket until it will slip onto the Housing from which the Attachment Drive Shaft projects. (It is sometimes necessary to wedge the split ends apart slightly.)

The lower edge of the Bracket should be lined up even with the lower edge of the Housing. (Not the fixed collar!) Then clamp the Bracket in place by tightening the large screw. (See Plate 48).

Rotate the Bracket until the Guide Bar is pointing straight up. Tighten the Bracket Clamp Bolt until the Bracket stays in place.

Loosen the Guide Bar Adjusting Screw and Clamp bolts that hold the two sides of the Bracket together. The latter should be loosened only enough to allow the Guide Bar to slip back and forth easily.

Put the Chain on the Guide Bar, bring it through the Bracket.

Now, insert the 1/2 inch Collar on the Shaft, with the COUNTERBORED SIDE toward the BOTTOM of the shaft. Slip the Sprocket on the Shaft, put the Chain around it. (NOTE: The Sprocket revolves in a Clockwise direction . . . the cutting edge of the Chain Teeth must move in the same Clockwise Direction.)

Then follow with the 1/4 inch Collar and the 7/8 inch Collar, with the COUNTERBORED SIDES OF BOTH COLLARS TOWARD THE SPROCKET. Put on the flat washer, then the nut and tighten down firmly.

After adjusting and tensioning the Chain (See Adjusting and tightening the Chain), Rotate Clamp to proper working position and tighten the bolt to hold it in place.

### ADJUSTING AND TIGHTENING THE CHAIN

After you have the Chain in place, tighten up the Chain by means of the Chain Adjusting Screw. The proper tension of the Chain is very important. When properly tensioned, the Chain will be slightly loose on the Guide Bar, but not loose enough for the Driving Links to come out of the slots when the Chain is grasped firmly and pulled strongly away from the Guide Bar.

Care must be taken not to get the tension too tight, or you will "burn" the Guide Bar. (See Plate 48).

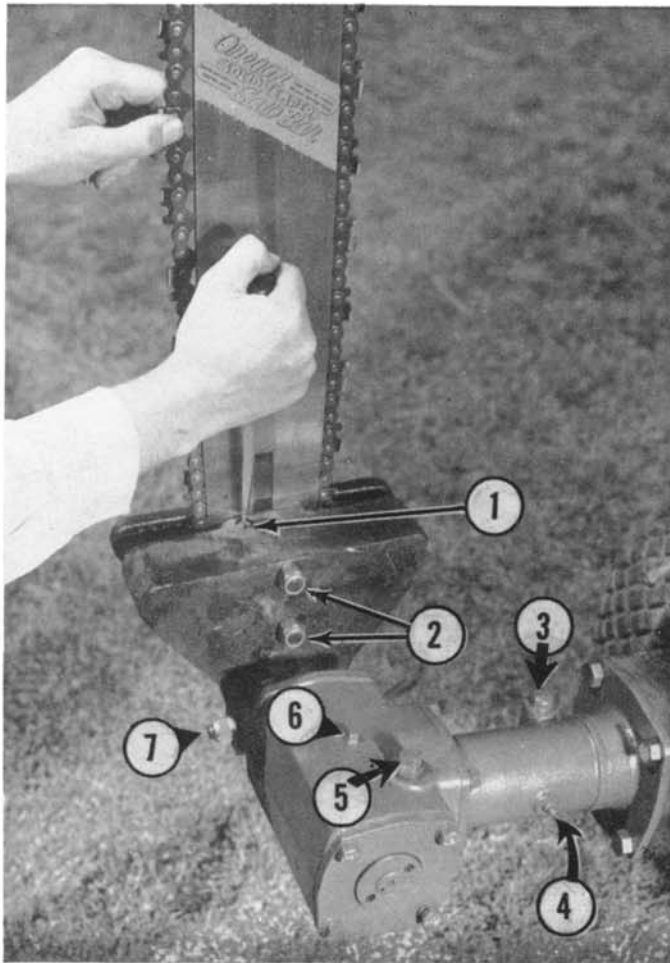


PLATE 48

(1) Chain Adjusting Screw, (2) Guide Bar Clamp Bolts, (3) Angle Adjustment Bolt, (4) Swivel Alemite Fitting, (5) Oil Filler Hole Plug, (6) Oil Level Hole Plug, (7) Bracket Clamp Nut.

#### ANGLE ADJUSTMENTS

To change the position of the Chain Saw in relation to the Housing on which the Bracket is mounted, loosen the large screw nut at the split part of the BRACKET. Then turn the Bracket and Chain Blade to the position desired, tighten the screw nut to hold it in position.

To rotate the Drive Assembly, loosen the nut on the Boss on the Swivel Casting. This will loosen the Swivel. Rotate the Saw Assembly to the position desired, then tighten the nut tightly to hold the Saw in the desired position.

### CHAIN SAW OPERATING INSTRUCTIONS

#### HOW TO SAW

Always swing the Saw **SIDEWAYS** into the tree if you are felling or notching.

**IMPORTANT:** Never feed the Saw into the wood by any method except **light hand pressure** at the handles. **DO NOT** lean against the handles, or brace your body in any way to feed the Saw into the work fast.

It is so easy to feed the Gravely Chain Saw that the tendency is to force the Saw into the wood. If you do force the Saw, it will cause excessive wear of the Chain and Guide Bar, resulting in unsatisfactory operation and excessive maintenance cost. Therefore, **ease** the Saw into the tree slowly, letting it "feed itself" without forcing. A properly sharpened and gauged Saw will feed itself into the work with almost no effort on your part.

#### DEPTH GAUGE SETTING

One of the two "secrets" of successful Chain Saw operation is the proper setting of the "Depth Gauges." The Depth

Gauges are projections that control the depth of bite of the Saw Chain. These are **NOT** factory set, and must be filed down to correct depth before your Chain Saw will cut satisfactorily.

A "Gaugit" is furnished with each Chain Saw. Directions for its use are also furnished, and it is very important that these directions be studied and the simple and easy filing down of the Depth Gauges be done before you attempt operation of the Chain Saw.

#### SHARPENING THE SAW

A Chain Saw will cut well only if it is sharp. Your Gravely Dealer will furnish you with a sharpening set that makes correct sharpening of your Chain Saw fast and easy. The set is **FREE**, and is made so that filing of the correct angle of the Tooth is carried out automatically. A sharp Saw Chain is the second of the two "Secrets" of successful Chain Saw operation.

#### CAUTIONS

The Chain Saw is a specialized tool, and must have specialized care for best results. Special Instructions for proper maintenance and sharpening of the Chain Saw are packed with the equipment. **BE SURE TO READ AND FOLLOW THESE ILLUSTRATED DIRECTIONS.**

It is possible to cut timber flush with the ground when using the Gravely Chain Saw, and in many cases this is desirable. However, digging the Saw into the dirt means that the soil, mixed with the lubricating oil, forms an abrasive that soon wears the Saw Chain and the Guide Bar. **You can ruin a new Saw Chain and Guide Bar in a short time unless proper precautions are taken. This is true of ANY Chain Saw.**

We recommend that if you intend to saw much timber off even with the ground that you purchase the Circular Saw, which is inexpensive, and make a second cut at your leisure to get rid of the low stump you may leave. The Circular Saw is used on the same drive as the Chain Saw.

Lubrication of the Saw Chain is very important. Lack of lubrication will "burn" the Guide Bar. (See Chain Saw Oiling System.)

### CHAIN SAW OILING SYSTEM

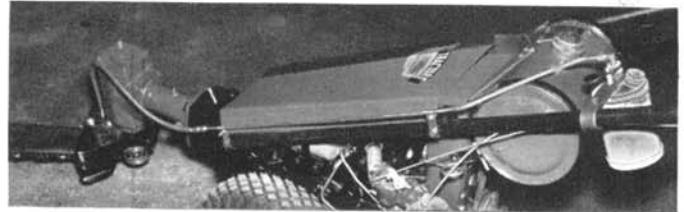


PLATE 49

The Chain Saw has a separate assembly which furnishes oil to the Chain by the operation of a thumb-plunger.

#### ATTACHING

First, install the Bracket on the Tractor Handle. Put in the Elbow Fitting, and attach the tubing as shown.

To install clips on Handle Bolts, simply loosen the bolts, insert the slotted end of the clips, and tighten the bolts.

Screw the male thread of the Flexible Tube into the Bracket of the Chain Saw. Then attach the other end of the Flexible Tube to the Oil Pipe with the straight Connector.

#### OPERATION

Depress the thumb lever on the Can. This supplies oil to the Chain. Use ordinary motor oil—new or used—as lubricant. The Chain should receive a liberal amount of oil during operation.

To disconnect, take the Flexible Tube loose from the Oil Pipe at the straight Connector. The Oil Tank and Oil Pipe may be left on the Tractor, or taken off, as you desire.

### THE CIRCULAR SAW

The Circular Saw is useful for clearing land, and cutting down small trees. It has the big advantage of making short work of small scrub growth, saplings, sprouts, etc., cutting them off even with the ground. This allows you to mow over the area with your Gravely Sickle Mower.

We do not recommend the Circular Saw for felling large trees. The Chain Saw will do this job faster and better.

### ATTACHING

To make a Circular Saw of your Chain Saw or Rotary Knife Mower, reverse the procedure described in the sections headed "Attaching" in the instructions for these tools.

To attach the 18" Circular Saw Blade, put on the Collars and Blade IN THIS ORDER:  $\frac{7}{8}$  inch Collar,  $\frac{1}{2}$  inch Collar, the 18" Circular Saw Blade, then the  $\frac{1}{4}$  inch Collar. Put on the large nut and tighten down firmly.

Be sure that the Collars next to the Circular Saw Blade have the COUNTERBORED sides FACING the Saw Blade.

### SAW GUARD

An optional Circular Saw Guard is available from your Dealer. To attach, fit the Split Ring to the Housing, swing the Guard to the position desired, and tighten down the two bolts and nuts. This will clamp the Guard in position.

### USING THE CIRCULAR SAW

The Circular Saw is fed into the work from the side the same way as the Chain Saw, by pivoting the Tractor. Just exert pressure on the handle opposite the work, and keep a firm pressure against the work. Do not force the Saw into the tree . . . let it "eat" its way in gradually.

### CLEARING LAND

The Circular Saw is most effective when used for land clearing operations. The method is to put the Saw in the horizontal position, and drive the tractor forward slowly. If you are working in very dense undergrowth, it is helpful to swing the Blade back and forth as you move slowly forward. This will let you cut a wide path. Your judgment will soon dictate when to stop the forward movement and concentrate on a sprout or sapling that is too large to "drive through".

Care should be taken not to run the Saw Blade into the ground, or against rocks. This will, of course, quickly dull the Saw and require sharpening and resetting.

### SHARPENING THE SAW BLADE

We do not recommend field sharpening. Instead, you are better off to take the Saw Blade to a professional Circular Saw Blade sharpener, or to your Gravely Dealer. "Setting" the teeth requires special tools, and sharpening the Saw with the correct angle also requires special equipment.

### STORAGE

If you are going to store your Circular Saw Blade for several days or longer, we recommend that you coat it heavily with Mobilgrease No. 2.

### ROTARY KNIFE MOWER

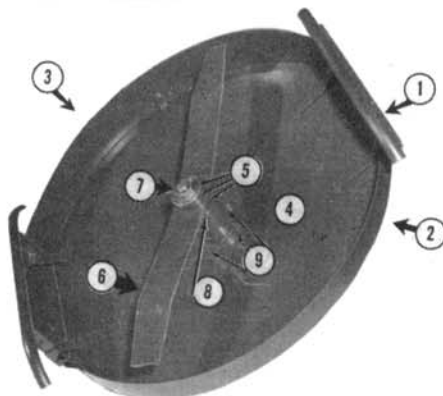


PLATE 50

(1) Skid and Skid Panel, (2) Front Fender, (3) Rear Fender (long guard), (4) Hood, (5) Collars ( $\frac{1}{4}$ ",  $\frac{1}{2}$ ",  $\frac{3}{4}$ " ), (6) Knife, (7) Attachment Drive Shaft Nut, (left hand thread), (8) Fixed Collar, (9) Hood Attaching Screws.

### ATTACHING

Remove the other tools, if on the drive, by reversing the process as described under "Attaching" in the appropriate instructions.

Remove the drive from the Tractor and turn it upside down . . . that is, the Attachment Drive Shaft is pointing up in the air.

Remove the four screws on that portion of the Drive Housing from which the Attachment Drive projects.

Now set the Rotary Mower Hood in place with the cup towards the Housing so the four holes in the hood line up with the holes in the housing. At this point, be sure the long fender is toward the tractor.

Insert the Screws through the holes in the Hood and tighten down firmly.

NOTE: A recent improvement embodies the use of two knives. This is not shown on the photograph.

To assemble or adjust the mower, use the collars in any order you wish.

Always be sure that at least one Collar is between the Knife and the Nut on the end of the Attachment Drive Shaft.

### ADJUSTING HEIGHT OF CUT

The height of cut is adjusted by these Collars. The closer the Knife is to the Housing, the higher the cut, and vice versa. By using different combinations of the three differently sized Collars, you adjust the height.

ALWAYS be sure the COUNTERBORED sides of the Collars are FACING THE KNIVES.

### SHARPENING

The knife may be sharpened by a file, or a grindstone. Attempt to follow the same bevel as the Knife had when you obtained it, although the exact degree of bevel is not critical.

### WARNING

Be very careful about putting your foot or your hands under the Hood of the Rotary Knife Mower while the attachment is running, or for an interval after you shut off the attachment. Always make sure the knife has stopped spinning before placing your hands or feet at the hood.

### GUARD ADJUSTMENTS

When mowing short weeds and lawn grass, the Small Fender should be in front, and the Long Fender in back. However, when you begin mowing in very high, heavy brush, it is best to remove the Back Fender and put the short Front Fender in its place, leaving the front of the mower open.

Fenders are removed and replaced by taking out the cap screws on the rim of the hood.

### LEAF MULCHER

#### ATTACHING

Attach the Rotary Knife Mower to the Tractor in the same manner as previous instructions designate.

Remove the Long and Short Fenders. Put the Long Fender on the front of the Rotary Knife Mower.

Put the Leaf Guard on the Rear of the Rotary Knife Mower.


Remove the Large Attachment Shaft Nut. Remove the collars, and the Knife. For best results, we recommend the  $\frac{7}{8}$  inch and  $\frac{1}{2}$  inch Collar on the Shaft first, then the knives, the  $\frac{1}{4}$  inch Collar and the Attachment Shaft Nut.

#### OPERATING

To operate the Leaf Mulcher, proceed as though you were mowing. Ordinarily, normal walking speed will be sufficient to do a good job. If using on wet, concentrated leaves, it may be necessary to go over them twice to get all the leaves.

#### CAUTION

Keep hands and feet away from the attachment while in gear and for an interval after being shut off. Be sure knives have stopped revolving before putting hands or feet under the hood!

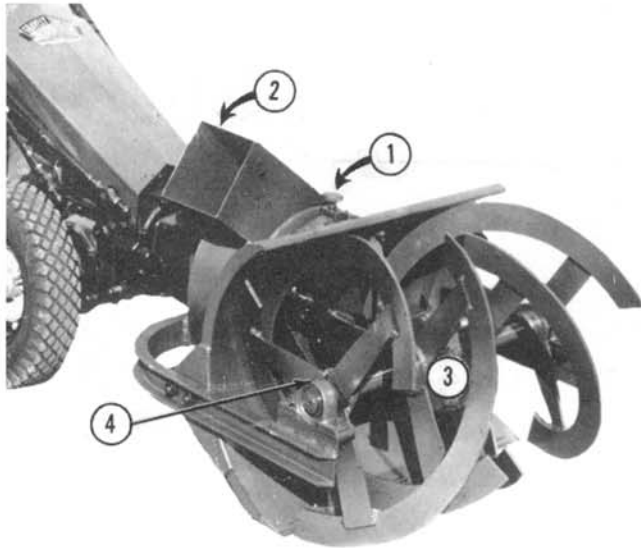

**PLATE 51**

1. Discharge Spout Clamp Wheel 2. Discharge Spout 3. Gear Housing  
4. Pillow Block Screw—remove this to lubricate Pillow Block Bearing

## SNOWBLOWER INSTRUCTIONS

### OPERATING INSTRUCTIONS GRAVELY SNOWBLOWER ATTACHMENT

#### LUBRICATION

On the gear housing of the snowblower are two pipe plugs, one large, one small.

Remove both plugs. Fill the gear housing through the large hole with Mobilube GX-90 until it begins to run out the small hole, which is the oil level. Avoid putting in more Mobilube than is required to fill to the level of this level plug.

There is an Alemite fitting on the swivel housing. This requires an occasional shot of Mobilgrease No. 2 or cup Grease.

The pillow block bearing requires a few drops of oil as needed. Remove the small plug on the top of the bearing with a screwdriver, and squirt each bearing with a few drops of motor oil. The amount of lubrication required will vary according to your use. However, usually these bearings will only require lubrication two or three times a season.

#### ATTACHING

The snowblower is attached to the front of the tractor with four bolts.

#### ADJUSTING

The spout is adjustable to any angle within practical working limits, by loosening a handwheel and small clamp. To operate, STOP THE ATTACHMENT by throwing out the attachment clutch lever. Then loosen the handwheel slightly, until the Fan Housing will turn. Adjust it to the angle you desire, then tighten the handwheel down against the clamp to hold the discharge spout in the chosen position.

The skids are removable by the use of a screwdriver. Simply take out the two screws which hold the skids to the blade.

#### OPERATION

Open the throttle gradually, after putting attachment and tractor in gear. If you are not using a Governor on your Machine, the throttle should be set about  $\frac{2}{3}$  of full throttle for most efficient operation.

#### MOVING VERY DEEP, HEAVY SNOW

We recommend that where you anticipate many hours of operation in deep, heavy snows, you purchase Gravelly Geared Wheels. These wheels slow the forward speed of the Tractor one-half, while the attachment remains at the same speed. This will give you much more efficient action, and more power for the wet snows. The only other method of obtaining the same results is to "slip" the clutch. This works for awhile but—as in an automobile—clutch slipping will soon cause excessive wear on the clutches, and require replacement.

You will find that it is less expensive to use Geared

Wheels than to use false economy, and pay a repair bill for clutch replacement.

#### HINTS AND CAUTIONS

NEVER attempt to kick, adjust or tinker with the reel, fan housing, or discharge spout while the attachment is in operation.

**WARNING — NEVER PUT HANDS IN DISCHARGE SPOUT WHEN ATTACHMENT IS IN OPERATION.**

BE CAUTIOUS when operating on gravel or rock surfaces. If a heavy rock is carried to the fan it will be expelled with enough force to hurt a person standing in the path of snow discharge, or break windows in automobiles and homes.

#### TRAVEL SPEED

The forward speed depends upon the depth and density of the snow. Ordinarily it will be necessary to run in low gear during plowing operations, especially if the snow is deep and heavy. There are, however, times when high speed is practical, in light or fluffy snow. You will soon learn to judge the proper forward speed.

Do not "Ram" into heavy snows, expecting the tractor to dig itself out. Feed the reel gradually into the snow, using enough forward speed to keep the fan loaded, but not to the extent that you find the machine attempting to bulldoze the snow.

To remove a maximum amount of snow, the operator should keep the machine with full engine load at all times. This means that the forward speed should be shifted from low to high gear as required by the depth and density of the snow.



**PLATE 52**

### 48-INCH SNOW PLOW, BLADE TYPE

The Gravelly Blade Type Snow Plow will clear the average sidewalk in one sweep, the driveway in two. It will move snow as deep as 18 inches, deriving its efficiency from its design—the blade does not push the snow, it ROLLS it out of the way.

This design, with the powerful Gravelly Tractor, will keep your walks and drives free of snow with very little effort on your part.

A simple Pin Adjustment allows you to move the blade so it will throw the snow to the left, right, or straight ahead. This makes clearing of large areas easier, since you can keep moving the snow in one direction if necessary.

#### ATTACHING

The Snow Plow is attached to the front of the Tractor by means of four bolts, in exactly the same manner as all other front hitch attachments.

## LUBRICATION

None required.

## ADJUSTMENTS

The Gravely Blade Type Snow Plow is adjustable to throw the snow to the left, right, or straight ahead.

This is done by simply removing the large "T" (Adjusting Bolt and Handle) and swinging the Blade to the position desired, lining up the proper hole in the Bracket with the hole in the Swivel, and dropping the "T" in place to hold it.

The Wearing Strip on the bottom of the Blade will eventually need replacement. All you do is remove the screws that hold it in place, replace the old Strip with a new one, and reinsert and tighten down the screws.

Skids for the Snow Plow are available from your Dealer. They are installed by removing the end screws from the Wearing Strip, and inserting the long screws furnished with the Skid. Then slip the Skid on the screw from the back of the blade, with the long side down and parallel to the ground, and fasten tightly with the nut.

## OPERATION SNOW REMOVAL

Chains are always helpful, especially on icy pavement. Full details about the Chains will be found on page 26.

Skids are useful in two places. . . where you are working on concrete pavement where one section is higher than another, forming an edge that will catch the plow as you go along, and on gravel or bluestone drives where you want to remove the snow but not the drive.

The Skids will lift the Blade off the surface enough to take care of these problems.

## BULLDOZING

The Blade comes in handy for many other uses other than removing snows. You can grade loose dirt, for example, and a set of Dual Wheels (described on page 14) will help you get the maximum amount of work from the Blade.

Many dairy farmers and cattle farmers use the blade for cleaning up the concrete holding pens next to the milking parlor. Some even take the tractor right inside the barn and clean the barn interiors with the Blade.

Poultry Farmers have also found the Blade useful for clean-up work in brooder houses. The Tractor will go through most doors, and once inside can make short work of cleaning out dirty litter and droppings.

Motels, Parking Lots, Hotels, and Drive-In Theatres with gravel drives and parking areas use the Blade in reverse to level the drive material. By backing up the tractor, the Blade smooths out the humps and dug-out places into a level surface again.

Landscapers find the Rotary Plow and the Blade Type Snow Plow a good combination for lawn preparation. The lawn is plowed first, then the Bulldozer is used to terrace or grade, finally going over the area to be seeded IN REVERSE, with the blade following the Tractor. This gives a very even, smooth seedbed properly prepared for lawn seeding. In some cases, the lawn is seeded, then the Blade is used again in the same manner. This sets the seeds at about the right depth for good germination.

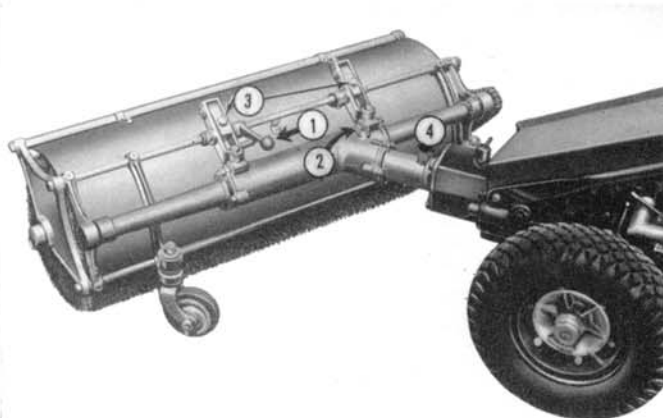


PLATE 53

1. Brush Contact Lever  
2. Oil Filler Plug

3. Brush Tension Adjusting Bolts  
4. Swivel Grease Cup

## POWER BRUSH

The Gravely Power Brush is a useful tool for cleaning parking lots, drives, sidewalks, and other areas where power sweeping is necessary.

The Brush is available in either 38" sweeping width, set at an angle, or 42" sweeping width, set straight ahead.

The Brush is also useful for sweeping of light snows—it will handle snows up to about six inches deep, brushing clean to the pavement unless there is an ice-skim under the snow.

## ATTACHING

The Power Brush is attached to the front of the Tractor by four bolts, in the same manner as all front hitch attachments.

## LUBRICATION

On the drive of the Power Brush next to the Tractor you will see either a Cup or an Alemite Fitting. This lubricates the Swivel and should be given a shot of Mobilgrease No. 2 as needed.

On the section of the drive next to the Brush is a large Oil Filler Plug. The drive should always contain enough Mobilube GX-140 so that the Gears will dip halfway in the oil. Of course, the attachment should be level when this checking is done. You can determine if the attachment needs oil by removing the Oil Filler Plug and looking down into the gears through the Oil Filler Hole.

No other lubrication is necessary except an occasional squirt of motor oil on the Chains.

## ADJUSTMENTS

CHAIN DRIVE adjustments are made by removing a half link when the Chain has been driving long enough to "stretch". This usually takes several months of use.

BRUSH CONTACT is adjusted by the Brush Adjusting Bolts. (See Plate 53.) Put the Brush in contact with the floor by lifting the Contact Lever up. Then turn the Bolts until the tension desired is obtained.

The proper tension for the Brush is something that must be learned by trial. It must have enough pressure to sweep clean. It is best to adjust downward gradually until the correct pressure is obtained. Too much pressure will cause the brushes to wear out prematurely.

## REVERSING OR CHANGING BRUSH STRIPS

If you find that the Brushes have worn more on one side than another, it is time to reverse the Brushes in the Brush Spiders. Reversing or changing a Strip involves the same operation—merely loosen the bolts that hold the Wedges in the Spider and remove the Strip. Reverse it or insert a new one, put the Wedge in place and tighten down the bolt. Adjust to the proper tension by the procedure described in "Brush Contact."

Extra Brush Strips are available from your dealer.

## TRANSPORTING THE BRUSH

To save unnecessary wear on the Brush, a Brush Contact Lever is provided which, when it is in the down position, will carry the Brush above floor level. When the Lever is pulled up, it will contact the Brush to the Floor.



PLATE 54

## HAULING CART

There are always odd jobs of hauling to be done . . . and the Gravely Hauling Cart will handle a thousand pound load!

The Cart attaches to the rear of the Tractor, has a seat on which you can ride while hauling.

Cart sides are removable, and stakes can be put in their place hauling bulky materials, such as hay. The Cart is equipped with a releasing Latch that dumps the Cart with no effort on your part, and pneumatic tires.

#### ATTACHING

The Cart requires the Rear Hitch. For attaching Instructions, see page 26.

#### LUBRICATION

The only lubrication required is an occasional shot of Mobilgrease No. 2 in the Alemite Fitting on each Wheel Disc.

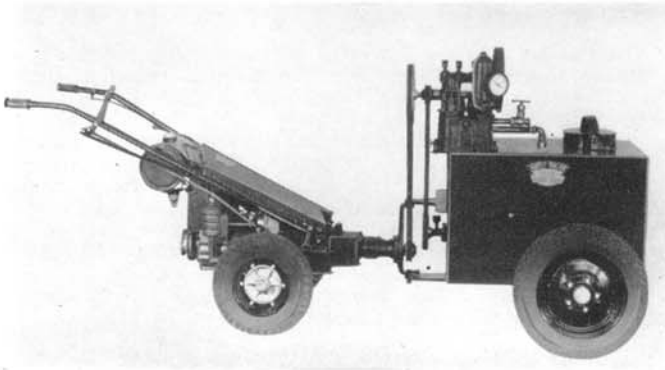


PLATE 55

## ESTATE SPRAYER

### SPRAYER ATTACHMENT

The Gravelly Estate Sprayer has a capacity of 50 gallons, a spray capacity of four gallons a minute at a pressure of 300 pounds.

It can protect your crops, fruit trees, shrubbery and garden from insect damage, and be used for a variety of other tasks . . . watering your lawn, washing the car, washing windows, whitewashing fences and buildings, disinfecting and cleaning livestock houses and pens, applying liquid fertilizers, as an emergency fire-fighting unit, even for disinfecting and fly-spraying livestock!

It is a small, convenient to handle unit—gets through the usual small fence gates, it is easily stored—yet it has the capacity and power to do a man sized job!

#### LUBRICATION

On the Swivel Casting where the Sprayer attaches to the Tractor is an Alemite fitting. This should receive a shot of Mobilgrease No. 2 as needed to keep the Swivel lubricated.

Full lubrication and operating instructions for the pump are packed with the Sprayer.

#### ATTACHING

The Sprayer is attached to the front of the Tractor by four bolts.

#### OPERATION

Start engine of the tractor, set throttle to normal working speed of engine. (About two-thirds throttle).

Put Sprayer in gear, then open Discharge Valve. (Valve is located on the connection leading to the hose and gun.)

Open the Hardie Gun and begin spraying, by twisting the handle. If the gauge reads between 250 and 300 pounds pressure, the Tractor speed is right and the pump is working correctly. If the gauge reads too low, advance throttle slightly. If pressure is still too low, adjust the pump according to the pump instructions. (Note: Do not race motor or run Tractor and Sprayer wide-open!)

#### ADJUSTMENTS

Adjustment of the pump is covered in the Pump instructions.

V-Belt slipping may be adjusted by tightening the nut in the split Pulleys of the drive. Be sure to loosen set-screw in nut before making this adjustment, and tighten set-screw again after adjustment has been made.

If you find that after several seasons operation the belts will not tighten sufficiently for efficient operation, replace by ordering from your Gravelly Dealer.



PLATE 56

## POST HOLE DIGGER

The Post Hole Digger for the Gravelly Tractor makes the tiresome, time-consuming chore of digging postholes faster and easier. The back-breaking work is done away with—POWER does the work!

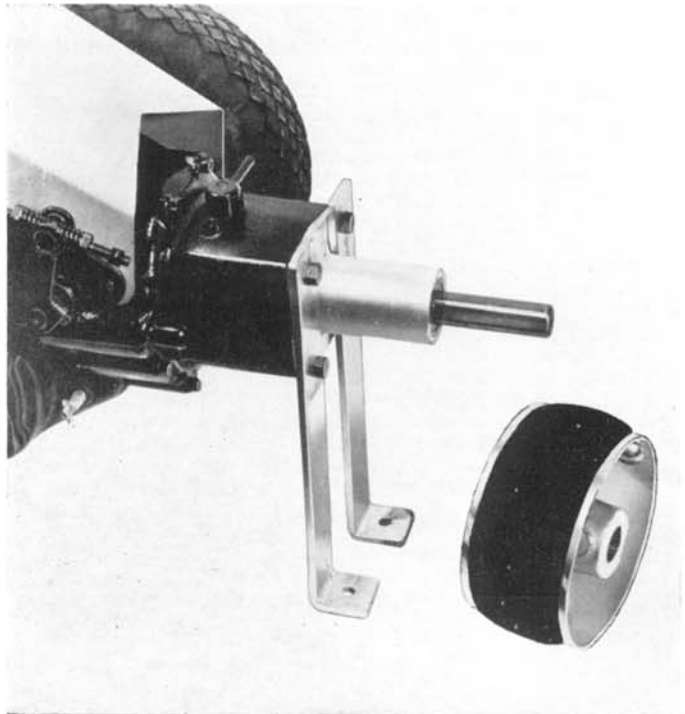


PLATE 57

## POWER TAKE-OFF

The Gravelly Power Take Off comes with a four-inch Pulley and Stand. Other pulleys, up to 20" diameter, may be used on same drive.

It is useful for running any equipment that can get its power from a belt, and that requires not more than five horsepower to operate it. You can use your Gravelly for standby generators, hammermills, pumps, conveyors, and bench Saws, and often save the cost of a special motor.

#### ATTACHING

The Gravelly Power Take Off is attached to the Tractor by four bolts, as are all power attachments. However, the



Stand, at your option, may be bolted on at the same time as you attach the Power Take Off to the Tractor. (See Plate 57.)

The standard bolts will hold the attachment, but we recommend that when using the stand you use a bolt  $\frac{1}{4}$  inch longer in length. These are available from your dealer.

If you have a job that requires the use of a Power Take Off frequently, sometimes it is a good idea to bolt the Stand in the proper place for the job. Then you can simply run the tractor onto the Power Take Off, tighten down the bolts and be ready for operation.

#### LUBRICATION

None required.

#### REMOVING AND REPLACING PULLEYS

The long Key is first put into the groove on the Shaft. Then slip the Pulley on the Shaft, with the Slot in the Pulley over the Key. Tighten down the two Pulley locking screws tightly. To remove reverse these directions.

Always be sure that the belts are in alignment during operation. Proper tension is a matter of trial for the individual task to be performed. The same applies to the size of Pulley needed, although most of the time the four inch Pulley will suffice.

#### CAUTION

Do not run engine wide open on any belt job, for any extended period of time.

#### HOW TO FIGURE PULLEY SIZE AND RPM

Sometimes you will have to figure how to use the Power Take Off with a piece of equipment that has a certain speed at which it should operate.

To find out which size Pulley to use, and what RPM will be generated, AT NORMAL WORKING SPEED—(throttle  $\frac{2}{3}$  down) use the table below.

P.T.O. Pulley Dia.	DRIVE PULLEY								
	4"	5"	6"	7"	8"	9"	10"	11"	12"
4"	1200	960	800	685	600	533	480	436	400
6"	1800	1440	1200	1028	900	800	720	654	600
12"	3600	2880	2400	2057	1800	1600	1440	1309	1200

The above speeds are based on P.T.O. speed of 1200 R.P.M. in high gear with engine operating at 2400 R.P.M. (Throttle  $\frac{2}{3}$  down).

## REAR HITCH

The Rear Hitch is required for the Riding Sulky, Hauling Cart, Hay Rake, Disc Harrow, Rear Cultivator, and Turnplow.

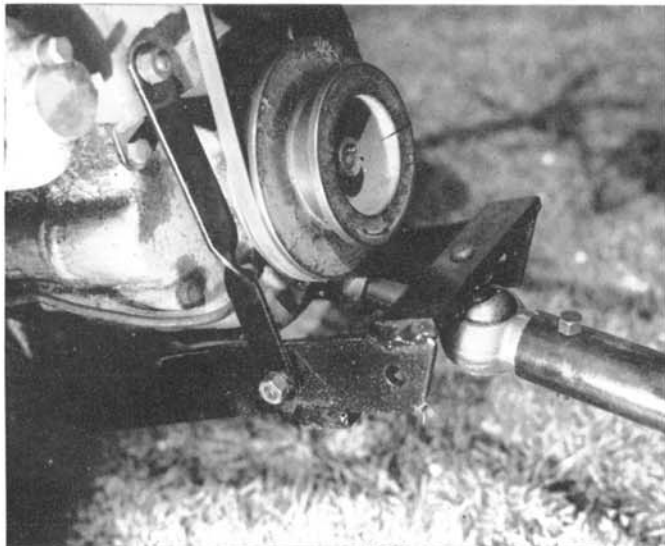


PLATE 58

## ATTACHING

First, attach the Braces loosely to the Frame of the Hitch, with the short twist down. (See Plate 58.)

Remove the second bolt from the bottom of the Chassis Casting, on both sides.

Slip the Frame in place, with the Steel Strip on the extreme end of the Frame on top.

Insert the two  $\frac{1}{2}$ " x  $1\frac{1}{4}$ " inch bolts and tighten. (These are furnished with the Rear Hitch.)

Remove the nuts from the L-224 Bracket, slip the Braces on, replace the nuts. (On Tractors with serial numbers less than 80,000, the length of the stud in the L-224 Bracket may be inadequate if both the Rear Hitch Brace and the Governor Bracket is mounted. In this case, order a new L-224 Bracket from your dealer.)

Now place the large nut on the Ball Stud, running nut up to the end of the threads. Screw the Ball Stud into the threaded hole on the Rear Hitch Cross Piece, with the Ball towards the ground. (The bottom of the Ball Stud has an opening to fit a  $\frac{1}{4}$ " Allen Wrench.)

Run the Ball Stud Lock Nut TIGHTLY against the Box Frame. IT IS IMPORTANT TO TIGHTEN THE NUT SECURELY AGAINST THE REAR HITCH FRAME BECAUSE THE NUT, INSTEAD OF THE THREADED STUD, MUST TAKE THE THRUST. UNLESS YOU TIGHTEN THIS NUT, YOU MAY STRIP THE THREADS IN THE REAR HITCH FRAME.

To Level the Tractor, after an attachment is in place, loosen the Ball Stud Lock Nut. To raise the handles, turn the Ball Stud clockwise. To lower the handles, counter-clockwise.

IMPORTANT! Attachment Boss Cover, or Toolholder Frame must be used on the front of the Tractor when using a Rear Attachment!

#### LUBRICATION

None required.

## INDIVIDUAL ATTACHMENT INSTRUCTIONS

### LAWN ROLLER, TRANSPORTATION CART

(Same methods apply to both)

#### ATTACHING

Assemble the Roller Rest Socket by slipping the Roller over the small end, and securing it in place with the Retaining Ring.

UNLOADED, Place Socket on Ball Stud, with the Roller end of the Roller Rest Socket resting on the Rear Hitch Bottom Cross Piece. While holding the Roller Rest Socket in this position, bring the hollow Draw Bar over the end of the Roller Rest Socket, and drop the Draw Bar Pin in place.



PLATE 59

**LOADED.** Attach the Roller Rest Socket to the Draw Bar. Bring the Tractor with Rear Hitch to the attachment, then stand the Tractor on its "nose." Guide the Roller of the Roller Rest Socket into position on the Rear Hitch Bottom Cross Piece. Pull Tractor down to normal position, guiding the Ball Stud into the Socket.

Level Tractor, if necessary, according to Rear Hitch Instructions.

## HAY RAKE

Use "LOADED" method under Lawn Roller, Transportation Cart. NOTE: The Split Socket can be used with any of the above attachments, if you desire. We do not recommend using these attachments with an attachment on the front also.

## RIDING SULKY

The Riding Sulky is ordinarily used with another attachment on the front, in which case the Split Socket furnished with the Rear Hitch is used.

Place the Split Socket on the Rear Hitch Ball Stud, pull the Draw Bar of the Sulky over the end of the Split Sockets, and drop the Draw Bar Pin through the holes in the Draw Bar and the Split Socket.

## ACCESSORIES GOVERNOR

The Gravely Governor will make much of your operation easier by feeding the gas as required, **automatically!** It's like having an extra hand—especially useful in plowing and mowing where the load on the Engine varies so rapidly.

In addition to convenience, the Governor is good for your Tractor—it prevents racing of the Motor, always sees—automatically—that the correct amount of gas is being fed to handle the load!



PLATE 60

## TIRE CHAINS

You will need Chains when using your Tractor for Snow removal, especially when there is a thin glaze of ice under the snow. The Gravely Chains are easily put on or taken off, and will give you the extra traction you need.

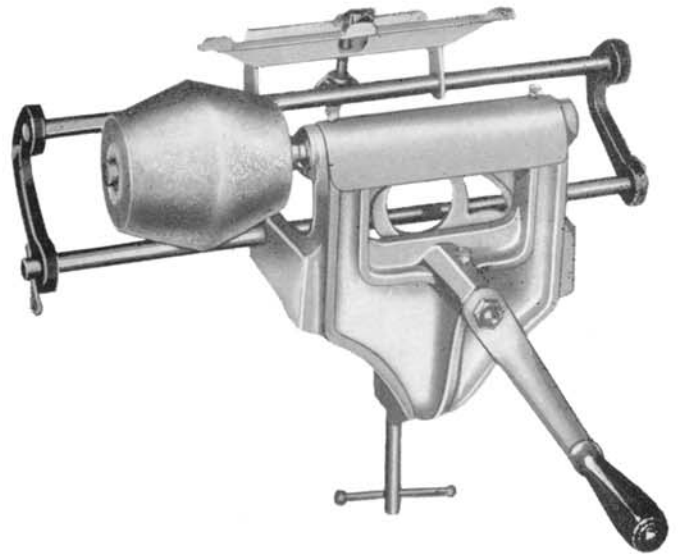


PLATE 61

## SICKLE GRINDER

The Gravely Sickle Grinder is a necessity if you do much mowing with your Sickle Mower. The Grinder comes equipped with a 3" Cone the correct bevel to sharpen your 3" Sickle Knives exactly right . . . and sharp knives are necessary for efficient mowing.

2" cones are also available for 2" sections. Specify which is desired when you order.

Full instructions for use are packed with each Grinder.

## TRACTOR COVER

The Gravely Tractor Cover is specifically designed to protect your tractor from weather, fire and water damage, and tampering. It is built to last . . . constructed of fire-proof, mildew-proof, waterproof, heavy duck with reinforced grommets, edges and cutouts.

The Cover fits snugly down over the handles and reaches entirely to the floor or the ground.

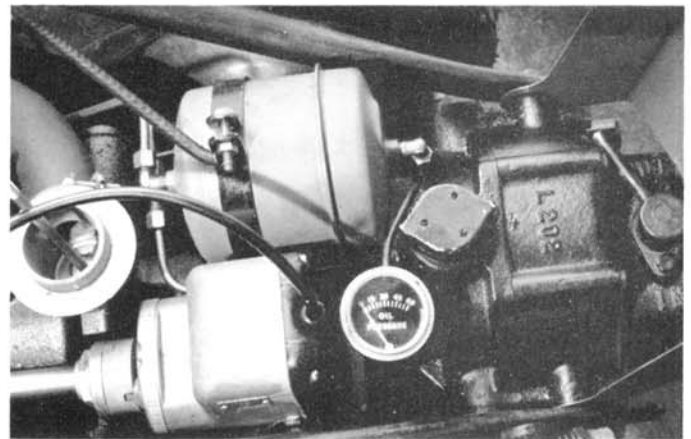


PLATE 62

## OIL PRESSURE GAUGE

The Oil Pressure Gauge is an optional attachment that soon pays for itself in more convenient operation. Instead of lifting off the Oil Filler Cap to check the Oil Pump, simply flip up the Hood, and check the Gauge!

## Guarantee

The GRAVELY Tractor and Attachments are guaranteed to be free from defective material and workmanship for a period of ninety (90) days and all defective parts will be replaced without charge, provided such parts are returned to our factory, transportation charges prepaid, and in our opinion after inspection are defective, and have not been damaged through neglect of operation.

### IMPORTANT

This is your guarantee, but it is not valid or effective unless within seven days after delivery of your equipment you complete the "Guarantee Registration Card" and mail it to

**GRAVELY TRACTORS, INC.**

Dunbar, West Virginia

**Be Sure to Mail Your  
Guarantee Registration Card!**

---

**Parts and Price Lists Available  
on Request**