


GRAVELY.


**ILLUSTRATED
PARTS LIST**

UTILITY SPRAYER


Model Number 15596E1
Effective Date 1-1-70
Form Number 14819P1

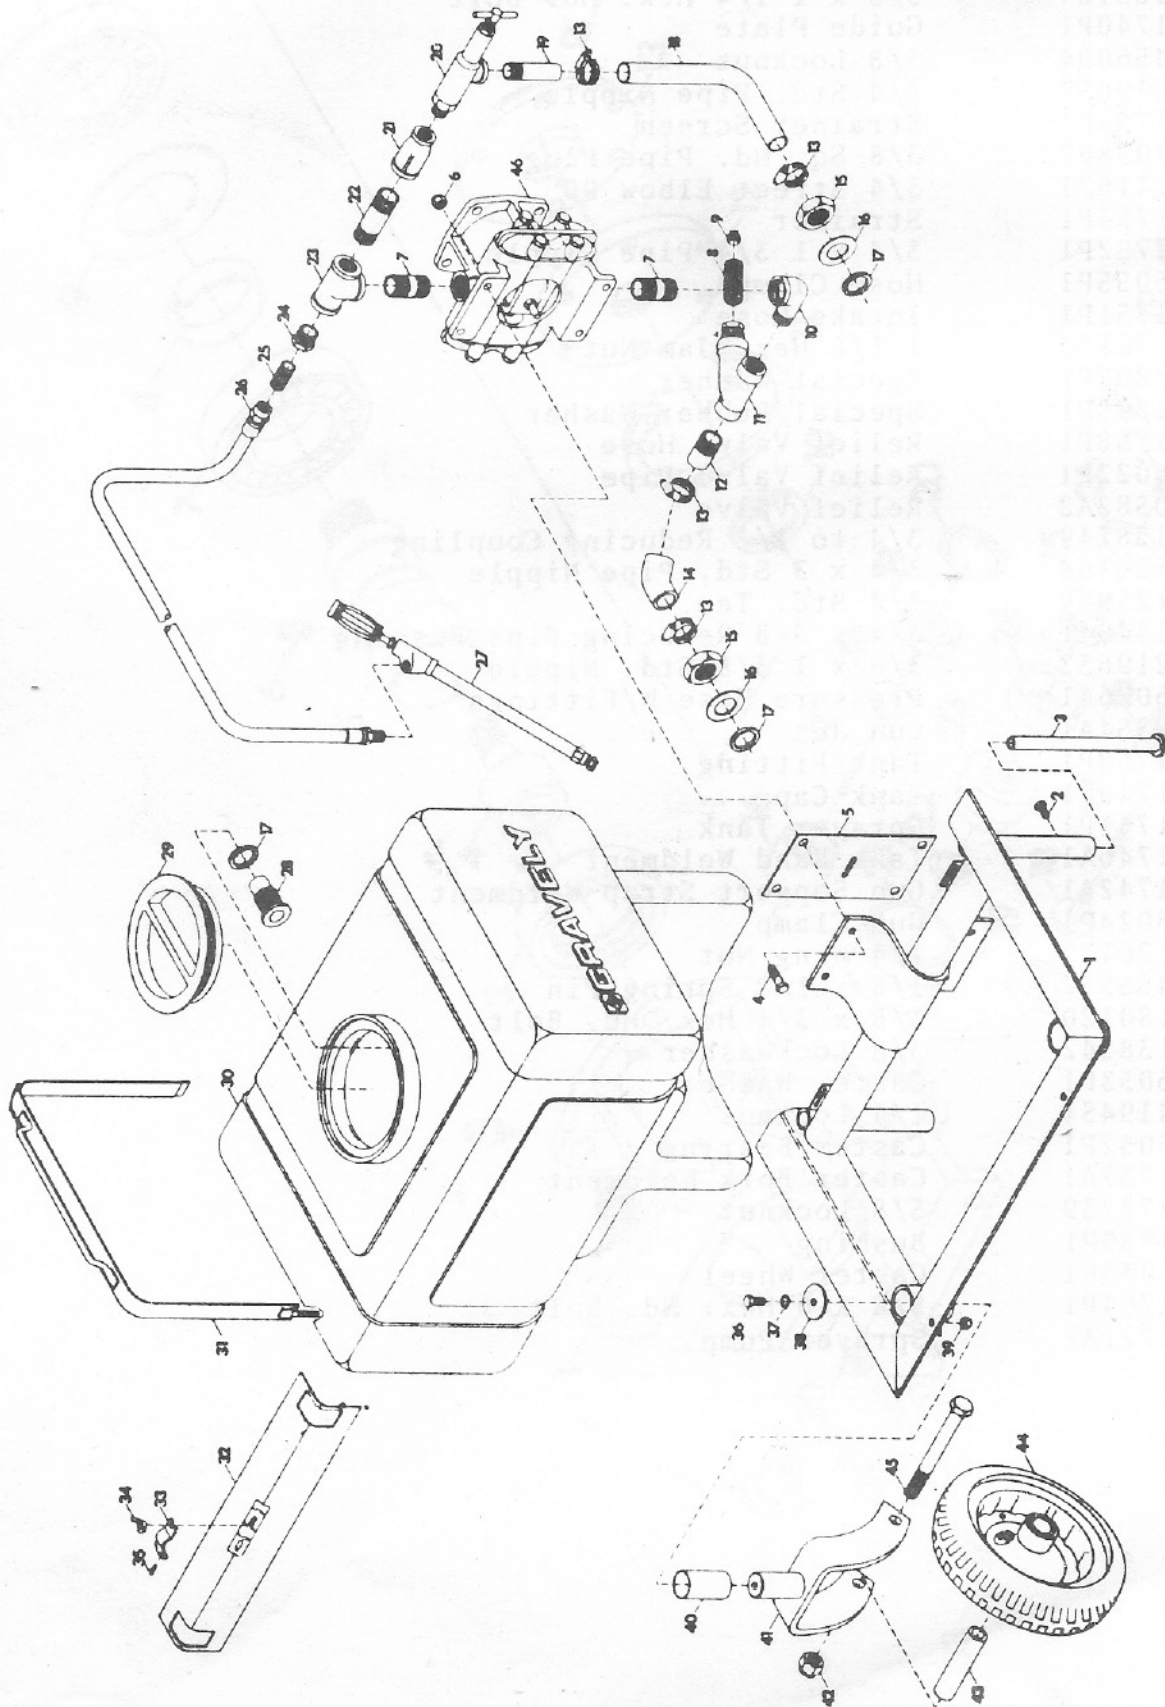

<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	12121A1	Mounting Frame Weldment
2	180075	5/16 x 5/8 Hex. Hd. Bolt
3	6027A1	Sprayer Tank Stand
4	180124	3/8 x 1 1/4 Hex. Hd. Bolt
5	11740P1	Guide Plate
6	456004	3/8 Locknut
7	219657	3/4 Std. Pipe Nipple
8	11754P1	Strainer Screen
9	103867	3/8 Sq. Hd. Pipe Plug
10	141621	3/4 Street Elbow 90°
11	11753P1	Strainer
12	11752P1	3/4 x 1 3/4 Pipe Nipple
13	6055P1	Hose Clamp
14	11751P1	Intake Hose
15	272139	1 1/8 Hex. Jam Nut
16	11897P1	Special Washer
17	11895P1	Special Rubber Washer
18	11758P1	Relief Valve Hose
19	6022P1	Relief Valve Pipe
20	10582A2	Relief Valve
21	128149	3/4 to 1/2 Reducing Coupling
22	126168	3/4 x 3 Std. Pipe Nipple
23	125988	3/4 Std. Tee
24	144041	3/4 x 3/8 Reducing Pipe Bushing
25	219632	3/8 x 1 3/8 Std. Nipple
26	6026A1	Pressure Hose W/Fittings
27	10354A1	Gun Jet
28	11750P1	Tank Fitting
29	11749P1	Tank Cap
30	11741P1	Sprayer Tank
31	11746A1	Tank Band Weldment
32	11742A1	Gun Support Strap Weldment
33	6024P1	Gun Clamp
34	126177	1/4 Wing Nut
35	455532	1/8 x 1/2 Spring Pin
36	180120	3/8 x 3/4 Hex. Hd. Bolt
37	138542	3/8 Lockwasher
38	6053P1	Caster Washer
39	9419454	1/4 Locknut
40	6052P1	Caster Bearing
41	11737A1	Caster Fork Weldment
42	272739	5/8 Locknut
43	11739P1	Bushing
44	6033P1	Caster Wheel
45	11764P1	5/8 x 6 Hex. Hd. Bolt
46	11721A1	Sprayer Pump

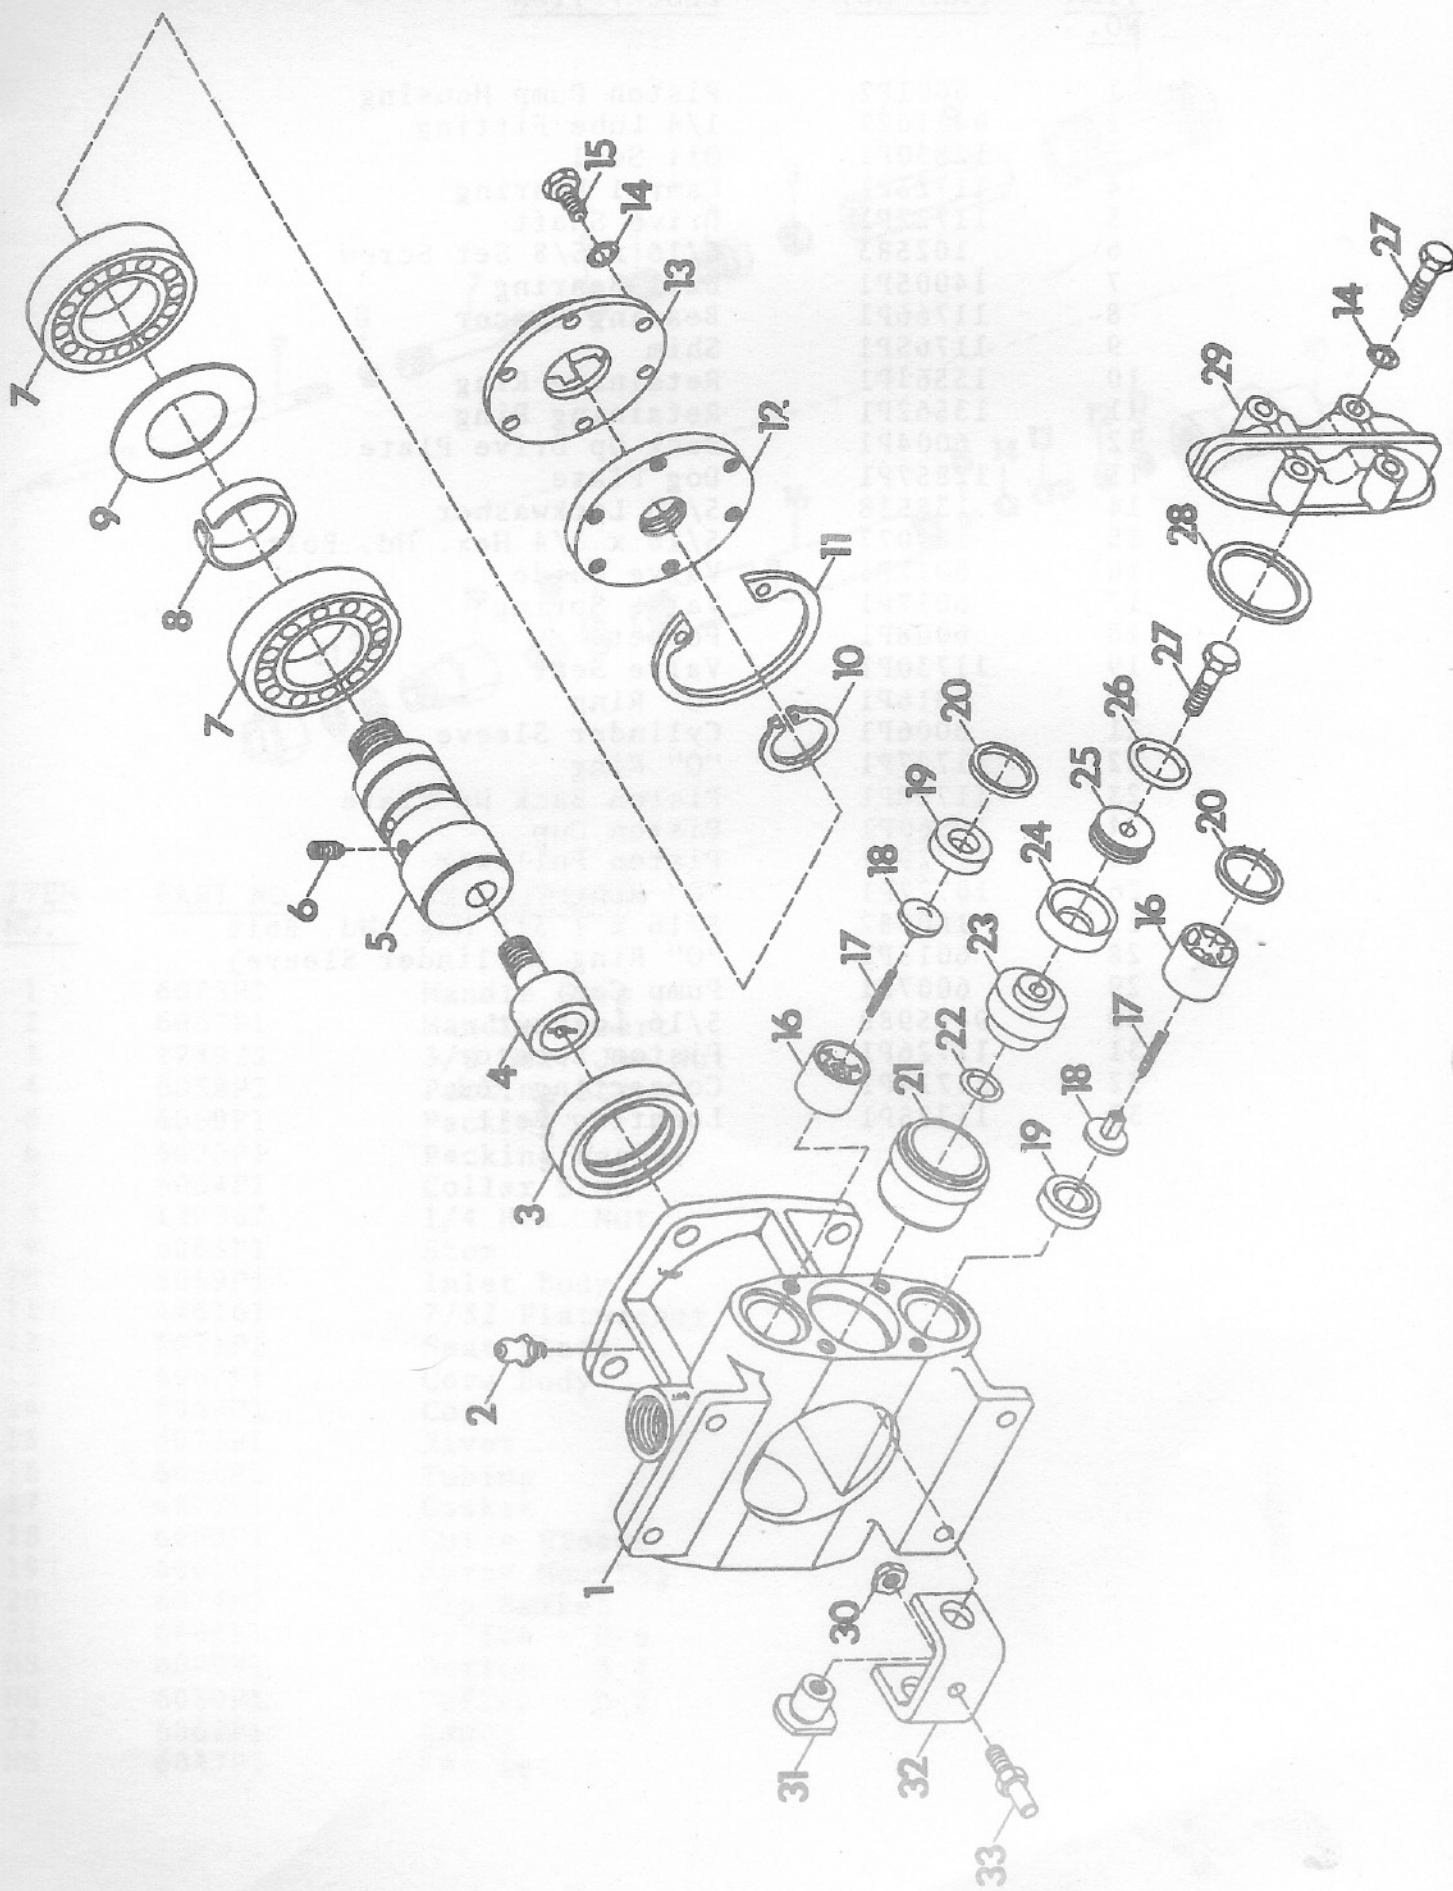

<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	6001P2	Piston Pump Housing
2	9411027	1/4 Lube Fitting
3	12830P1	Oil Seal
4	11723P1	Camrol Bearing
5	11722P1	Drive Shaft
6	102583	5/16 x 5/8 Set Screw
7	14005P1	Ball Bearing
8	11766P1	Bearing Spacer
9	11765P1	Shim
10	13561P1	Retaining Ring
11	13562P1	Retaining Ring
12	6004P1	Back Up Drive Plate
13	12857P1	Dog Plate
14	138538	5/16 Lockwasher
15	180077	5/16 x 3/4 Hex. Hd. Bolt
16	6012P1	Valve Guide
17	6017P1	Valve Spring
18	6008P1	Poppet
19	11730P1	Valve Seat
20	6016P1	"O" Ring
21	6006P1	Cylinder Sleeve
22	11727P1	"O" Ring
23	11728P1	Piston Back Up Plate
24	10560P1	Piston Cup
25	11729P1	Piston Follower
26	10727P1	"O" Ring
27	180082	5/16 x 1 3/8 Hex. Hd. Bolt
28	6015P1	"O" Ring (Cylinder Sleeve)
29	6007P1	Pump Cap
30	9415988	5/16 Locknut
31	11726P1	Piston Locator
32	11724P1	Connecting Rod
33	11725P1	Locating Bolt

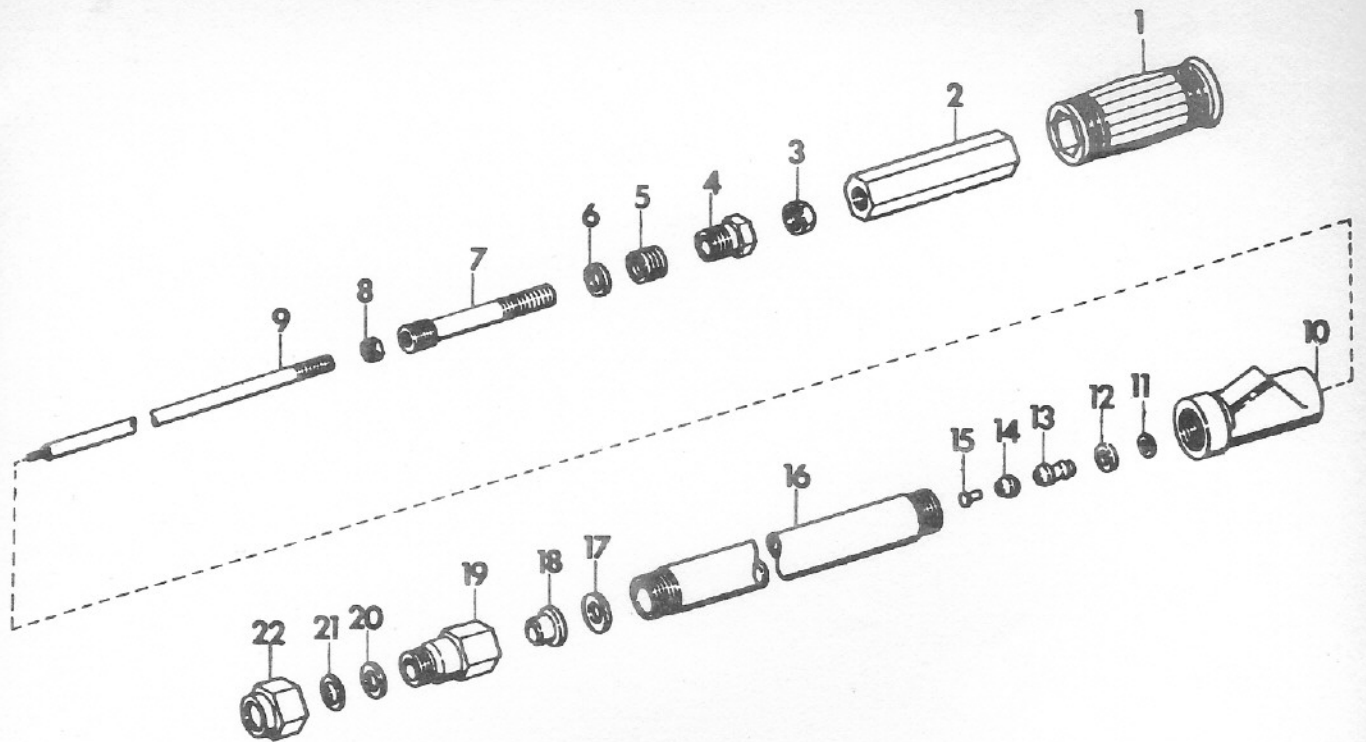

<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	6075P1	Handle Grip
2	6057P1	Handle Insert
3	124925	3/8 Hex. Jam Nut
4	6058P1	Packing Screw
5	6069P1	Packing
6	6070P1	Packing Washer
7	6064P1	Collar Stud
8	120367	1/4 Hex. Nut
9	6065P1	Stem
10	6059P1	Inlet Body
11	446161	7/32 Flatwasher
12	6071P1	Seat Plate
13	6067P1	Core Body
14	6068P1	Core
15	6073P1	Rivet
16	6066P1	Tubing
17	6072P1	Gasket
18	6060P1	Guide Sleeve
19	6061P1	Spray Housing
20	6074P1	Tip Gasket
21	6048P1	Orifice - D-6
NS	6049P1	Orifice - D-4
NS	6050P1	Orifice - D-2
22	6062P1	Cap
NS	6047P1	Tee Jet